



Illumination

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	36	D2	36	R4	B 37
A10	36	E6	36	R5	37
B5	36	F7	37	R7	37
C6	36	H7	37	R19	37
C9	A 36	J6	37	T8	37
C12	36	J7	37		
C16	B 36	R3	A 37		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IC		
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IL	24	
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)
1C	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

: Ground Points

Code	See Page	Ground Points Location
IE	44	Behind the Combination Meter
IG	44	Right Kick Panel

