


- * 1 : w/ Moon Roof
- * 2 : w/o Moon Roof
- * 3 : w/ Door Lock Control
- * 4 : w/o Door Lock Control
- * 5 : w/ Automatic Glare-Resistant EC Mirror
- * 6 : w/o Automatic Glare-Resistant EC Mirror
- * 7 : w/ Stereo Component Amplifier
- * 8 : w/o Stereo Component Amplifier

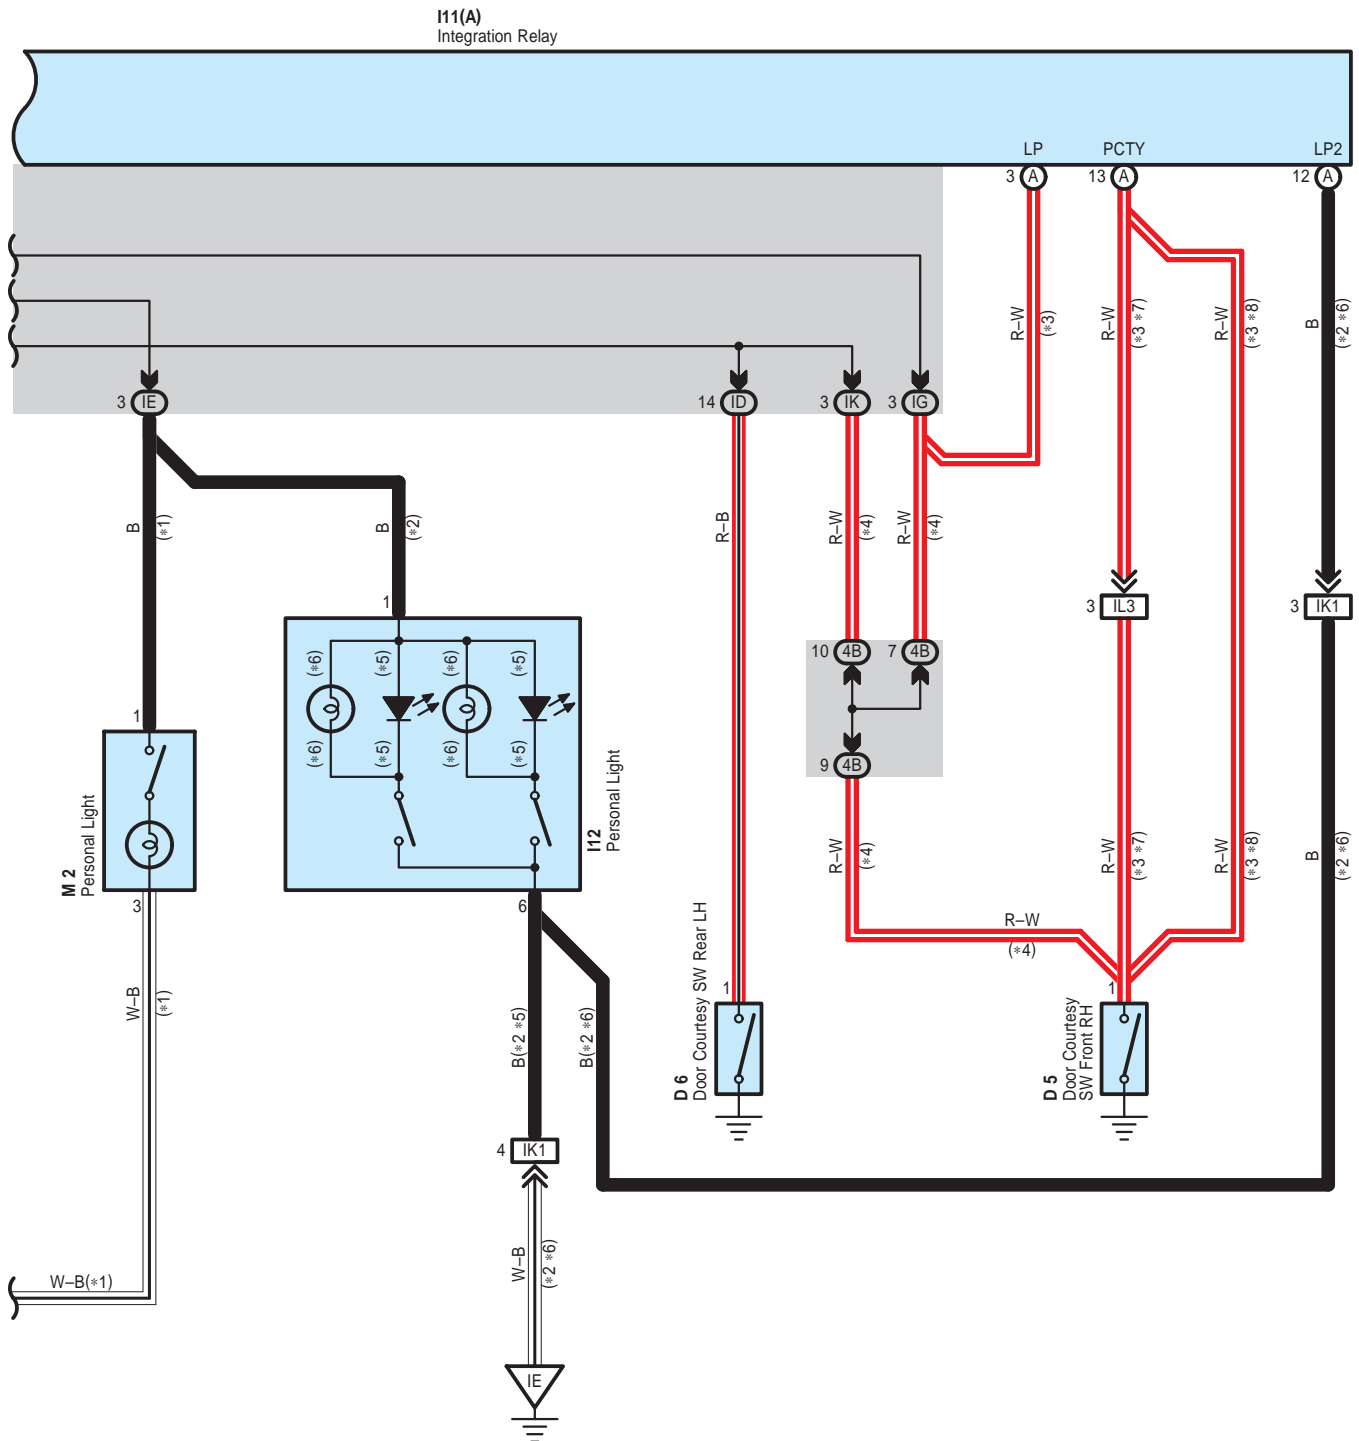

Interior Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C9	36	D7	40 (*2)	J10	38 (*1)
D4	38 (*1)	I11	A		40 (*2)
	40 (*2)	I12		L3	38 (*1)
D5	38 (*1)				40 (*2)
	40 (*2)	I13		L4	38 (*1)
D6	38 (*1)				40 (*2)
	40 (*2)	J6	37	M2	39 (*1)
D7	38 (*1)	J7	37		41 (*2)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IE	25	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
IK		
IL	24	
4B	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	45	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
IL3	45	Floor Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IE	44	Behind the Combination Meter
IG	44	Right Kick Panel

* 1 : w/ Side Airbag and/or Stereo Component Amplifier * 2 : w/o Side Airbag and Stereo Component Amplifier

