



Seat Belt Warning

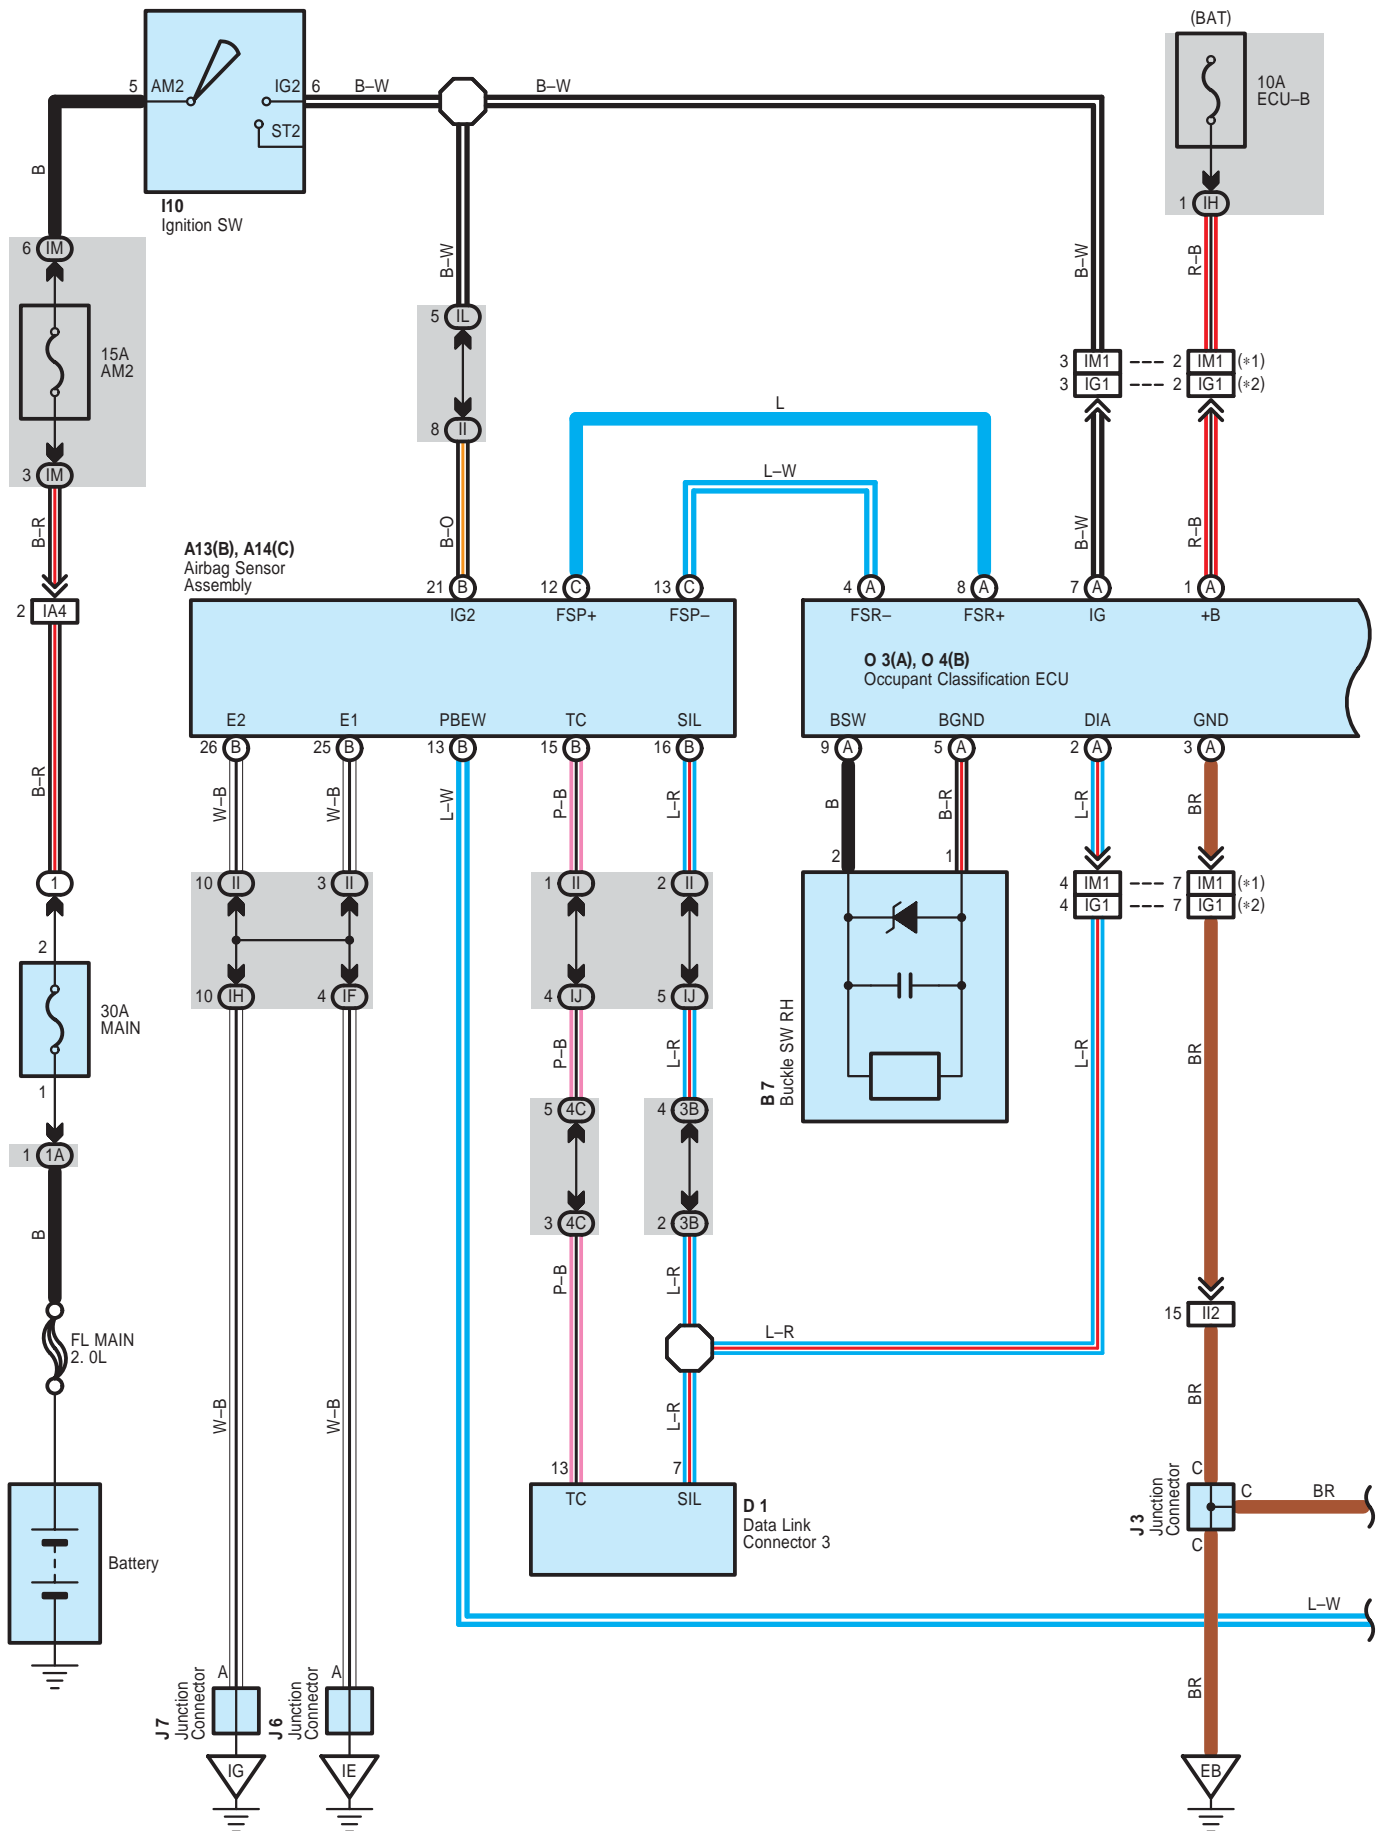

* 1 : w/ Side Airbag and/or Stereo Component Amplifier
* 2 : w/o Side Airbag and Stereo Component Amplifier

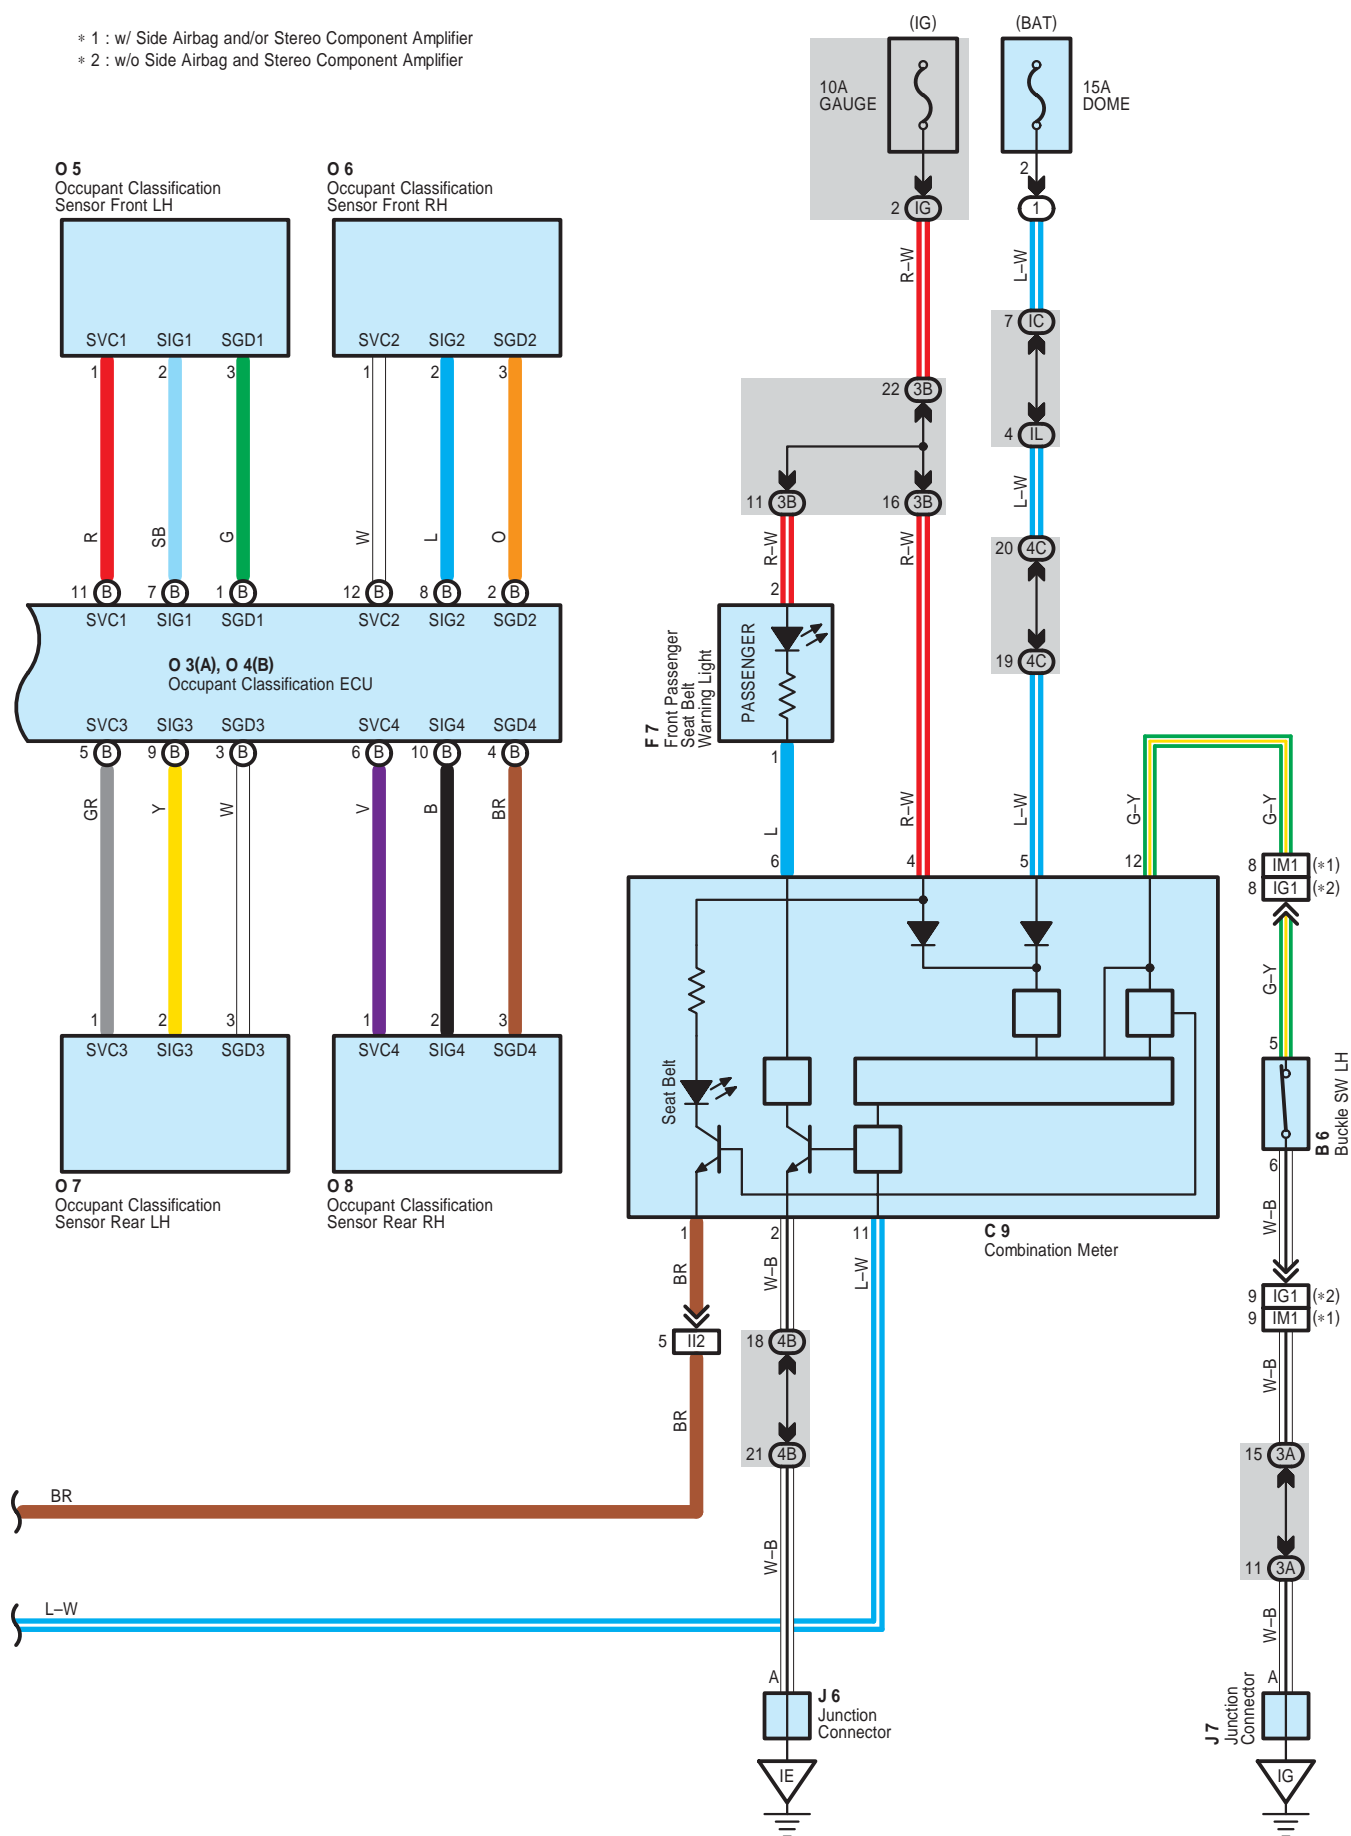

Seat Belt Warning

System Outline

Current is always applied from the DOME fuse to TERMINAL 5 of the combination meter. When the ignition SW is turned to ON position, the current from the GAUGE fuse flows to TERMINAL 4 of the combination meter and flows TERMINAL 1 of the front passenger seat belt warning light.

Seat Belt Warning System

When the ignition SW turned on, a signal is input to the combination meter. To determine whether the driver has fastened the seat belt, a signal is input from the buckle SW LH to TERMINAL 12 of the combination meter. When the seat belt is not fastened, the seat belt warning light in the combination meter blinks, and emits a warning sound.

In addition, the front passenger is recognized by a sensor (Occupant detection sensor) is installed in the front passenger seat, and determines whether the seat belt is fastened. When not fastened, the signals from the occupant detection sensor is input to TERMINAL 11 of the combination meter, and the front passenger seat belt warning light blinks.

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A13	B	36	I10		37	O5	41 (*2)
A14	C	36	J3		37	O6	39 (*1)
B6		38 (*1)	J6		37		41 (*2)
		40 (*2)	J7		37	O7	39 (*1)
B7		38 (*1)	O3	A	39 (*1)		O8
		40 (*2)			41 (*2)	39 (*1)	
C9	36	O4	B	39 (*1)			
D1	36			41 (*2)			
F7	37	O5		39 (*1)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
II		
IJ		
IL	24	
IM		
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)
3A	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
IG1	45	Instrument Panel Wire and Instrument Panel No.3 Wire (Front Side of the Parking Brake Lever)
II2	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IM1	45	Instrument Panel Wire and Floor Wire (Front Side of the Parking Brake Lever)

* 1 : w/ Side Airbag and/or Stereo Component Amplifier * 2 : w/o Side Airbag and Stereo Component Amplifier



: **Ground Points**

Code	See Page	Ground Points Location
EB	42 (1ZZ-FE)	Left Side of the Cylinder Head
	43 (2ZZ-GE)	
IE	44	Behind the Combination Meter
IG	44	Right Kick Panel