



Audio System with Stereo Component Amplifier

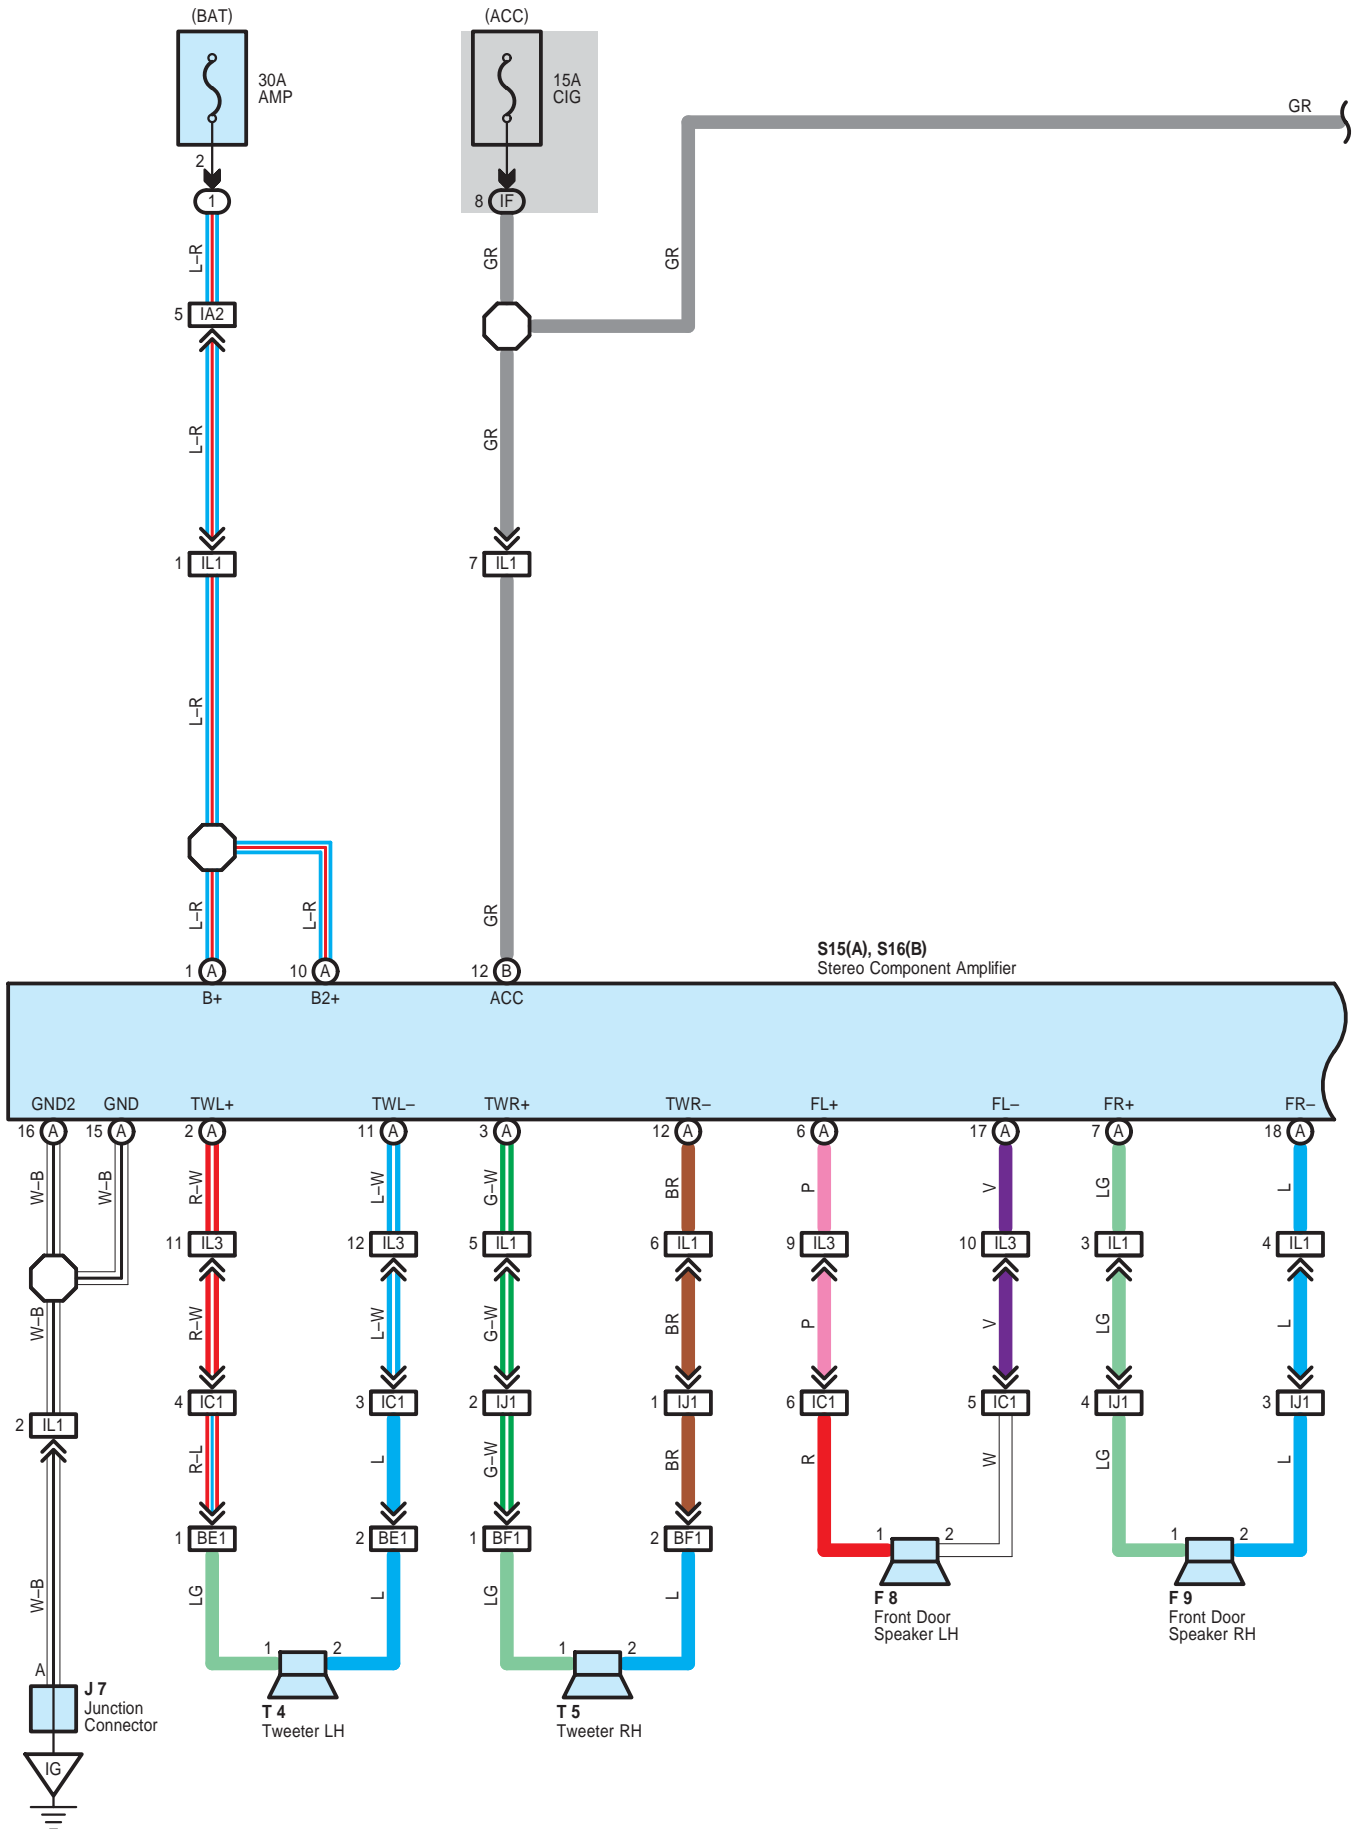

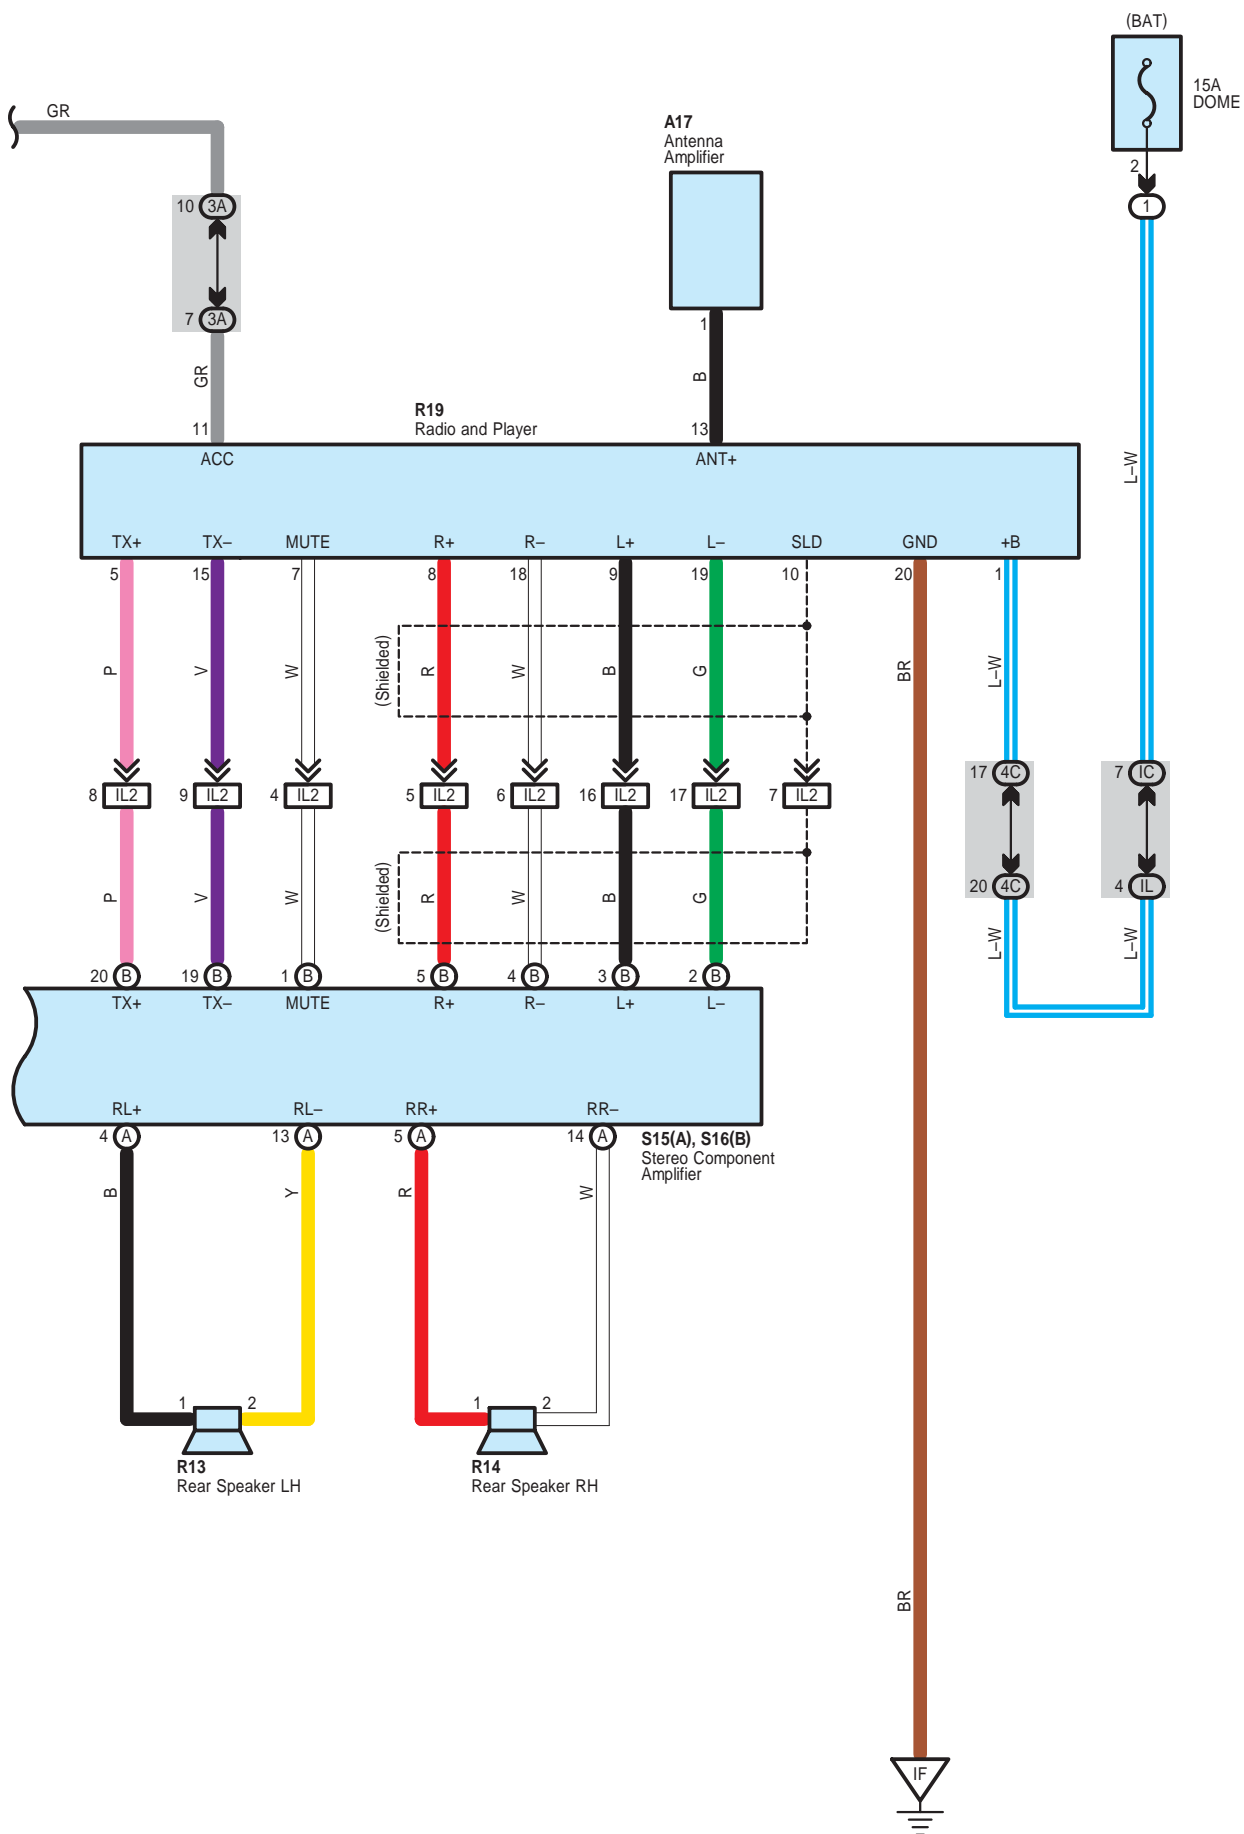

Audio System with Stereo Component Amplifier

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A17	36	R13	39 (*1)	S16	B
F8	38 (*1)		41 (*2)	T4	39 (*1)
	40 (*2)	R14	39 (*1)		41 (*2)
F9	38 (*1)		41 (*2)	T5	39 (*1)
	40 (*2)	R19	37		41 (*2)
J7	37	S15	A		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
3A	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4C	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
IC1	44	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IJ1	45	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	45	Floor Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IL3		
BE1	46 (*1)	Speaker Tweeter LH Wire and Front Door LH Wire (Inside of the Front Door LH)
	47 (*2)	
BF1	46 (*1)	Speaker Tweeter RH Wire and Front Door RH Wire (Inside of the Front Door RH)
	47 (*2)	

: Ground Points

Code	See Page	Ground Points Location
IF	44	Behind the Combination Meter
IG	44	Right Kick Panel

* 1 : w/ Side Airbag and/or Stereo Component Amplifier * 2 : w/o Side Airbag and Stereo Component Amplifier

