



Power Source

- * 1 : 1ZZ-FE
- * 2 : 2ZZ-GE
- * 3 : w/ VSC
- * 4 : w/o VSC

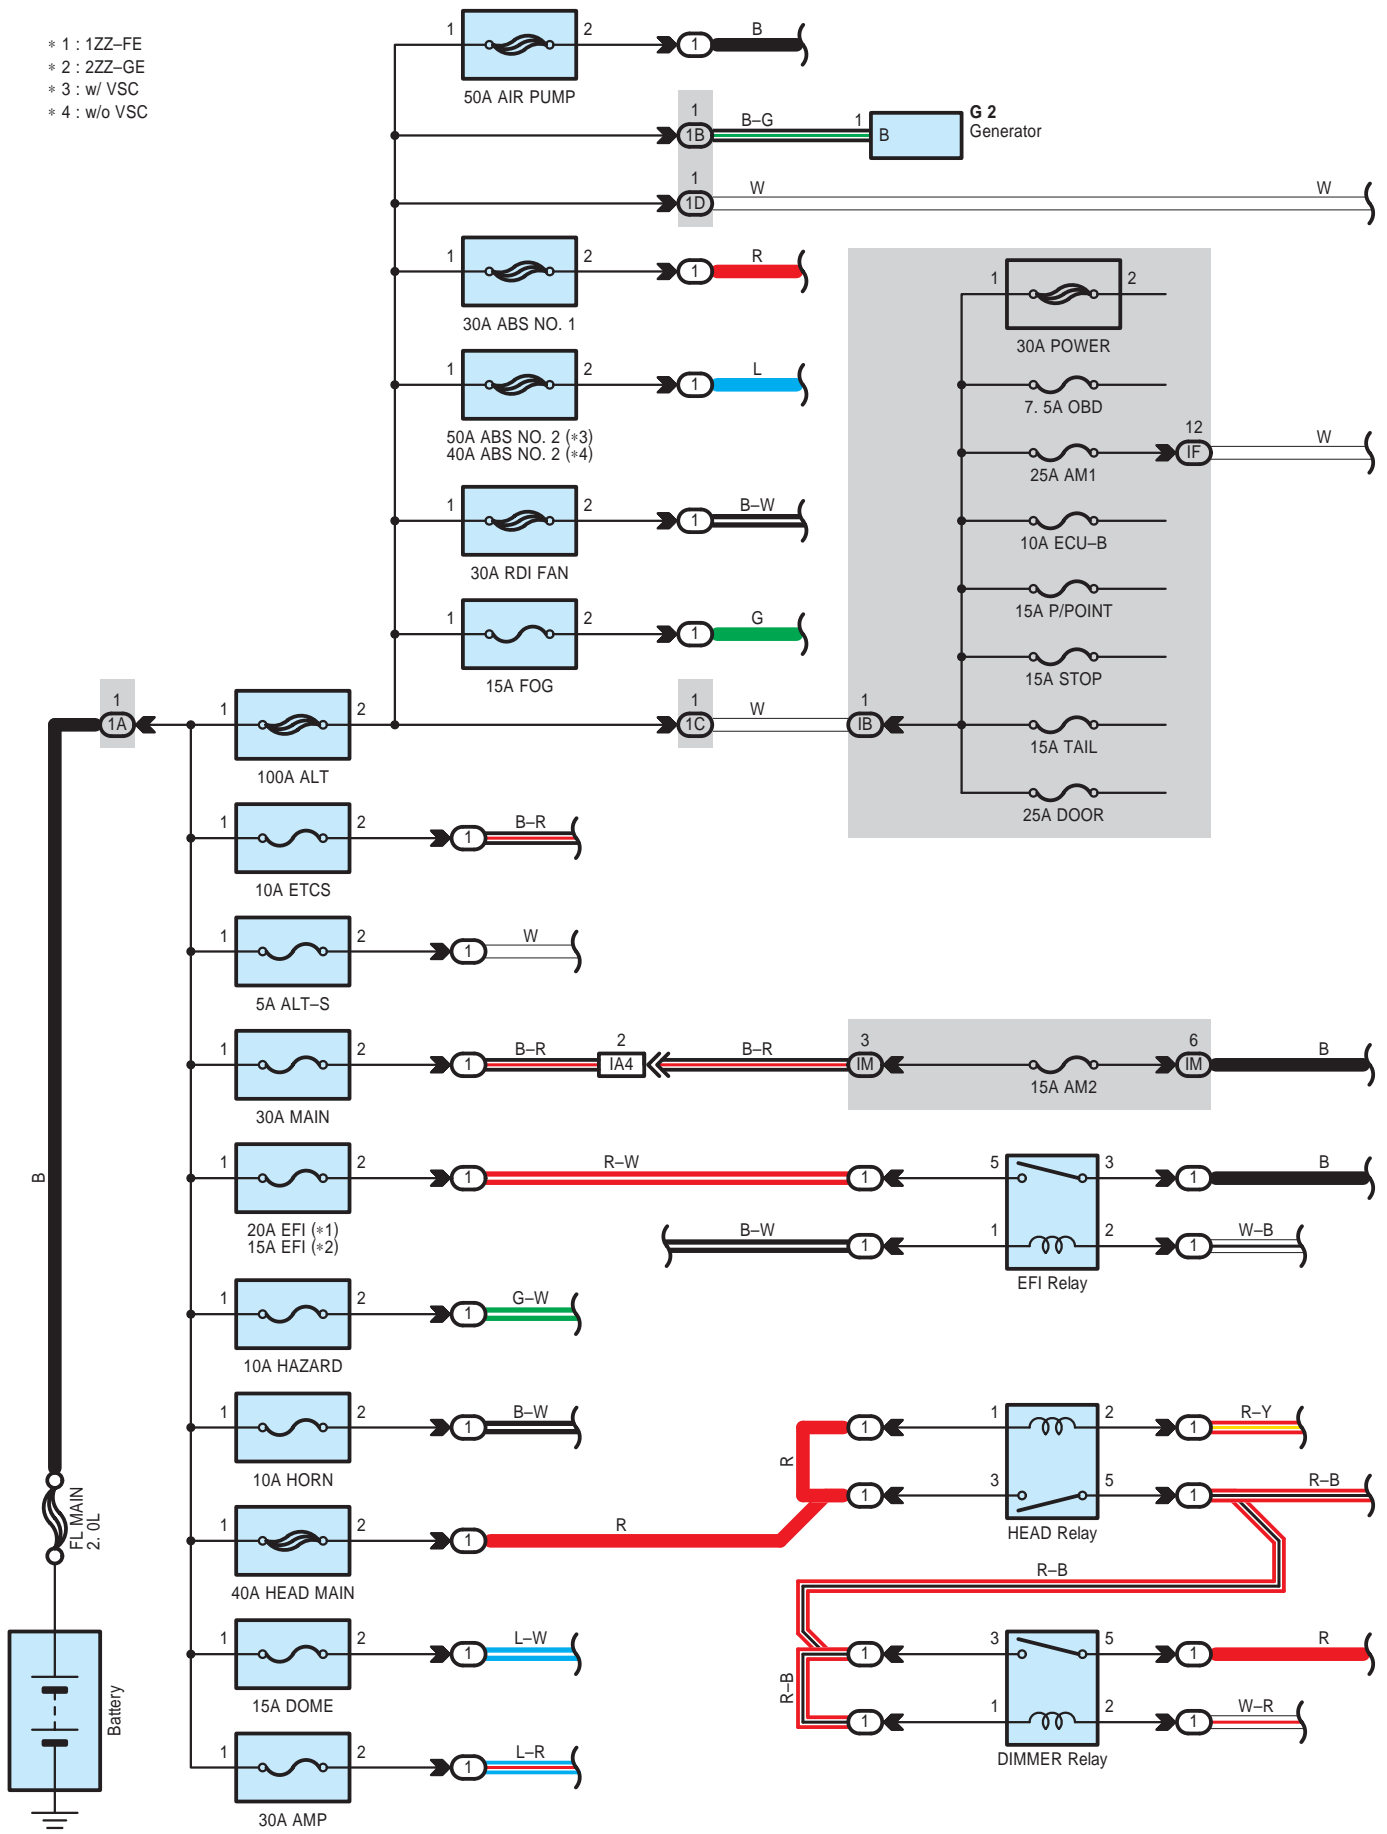

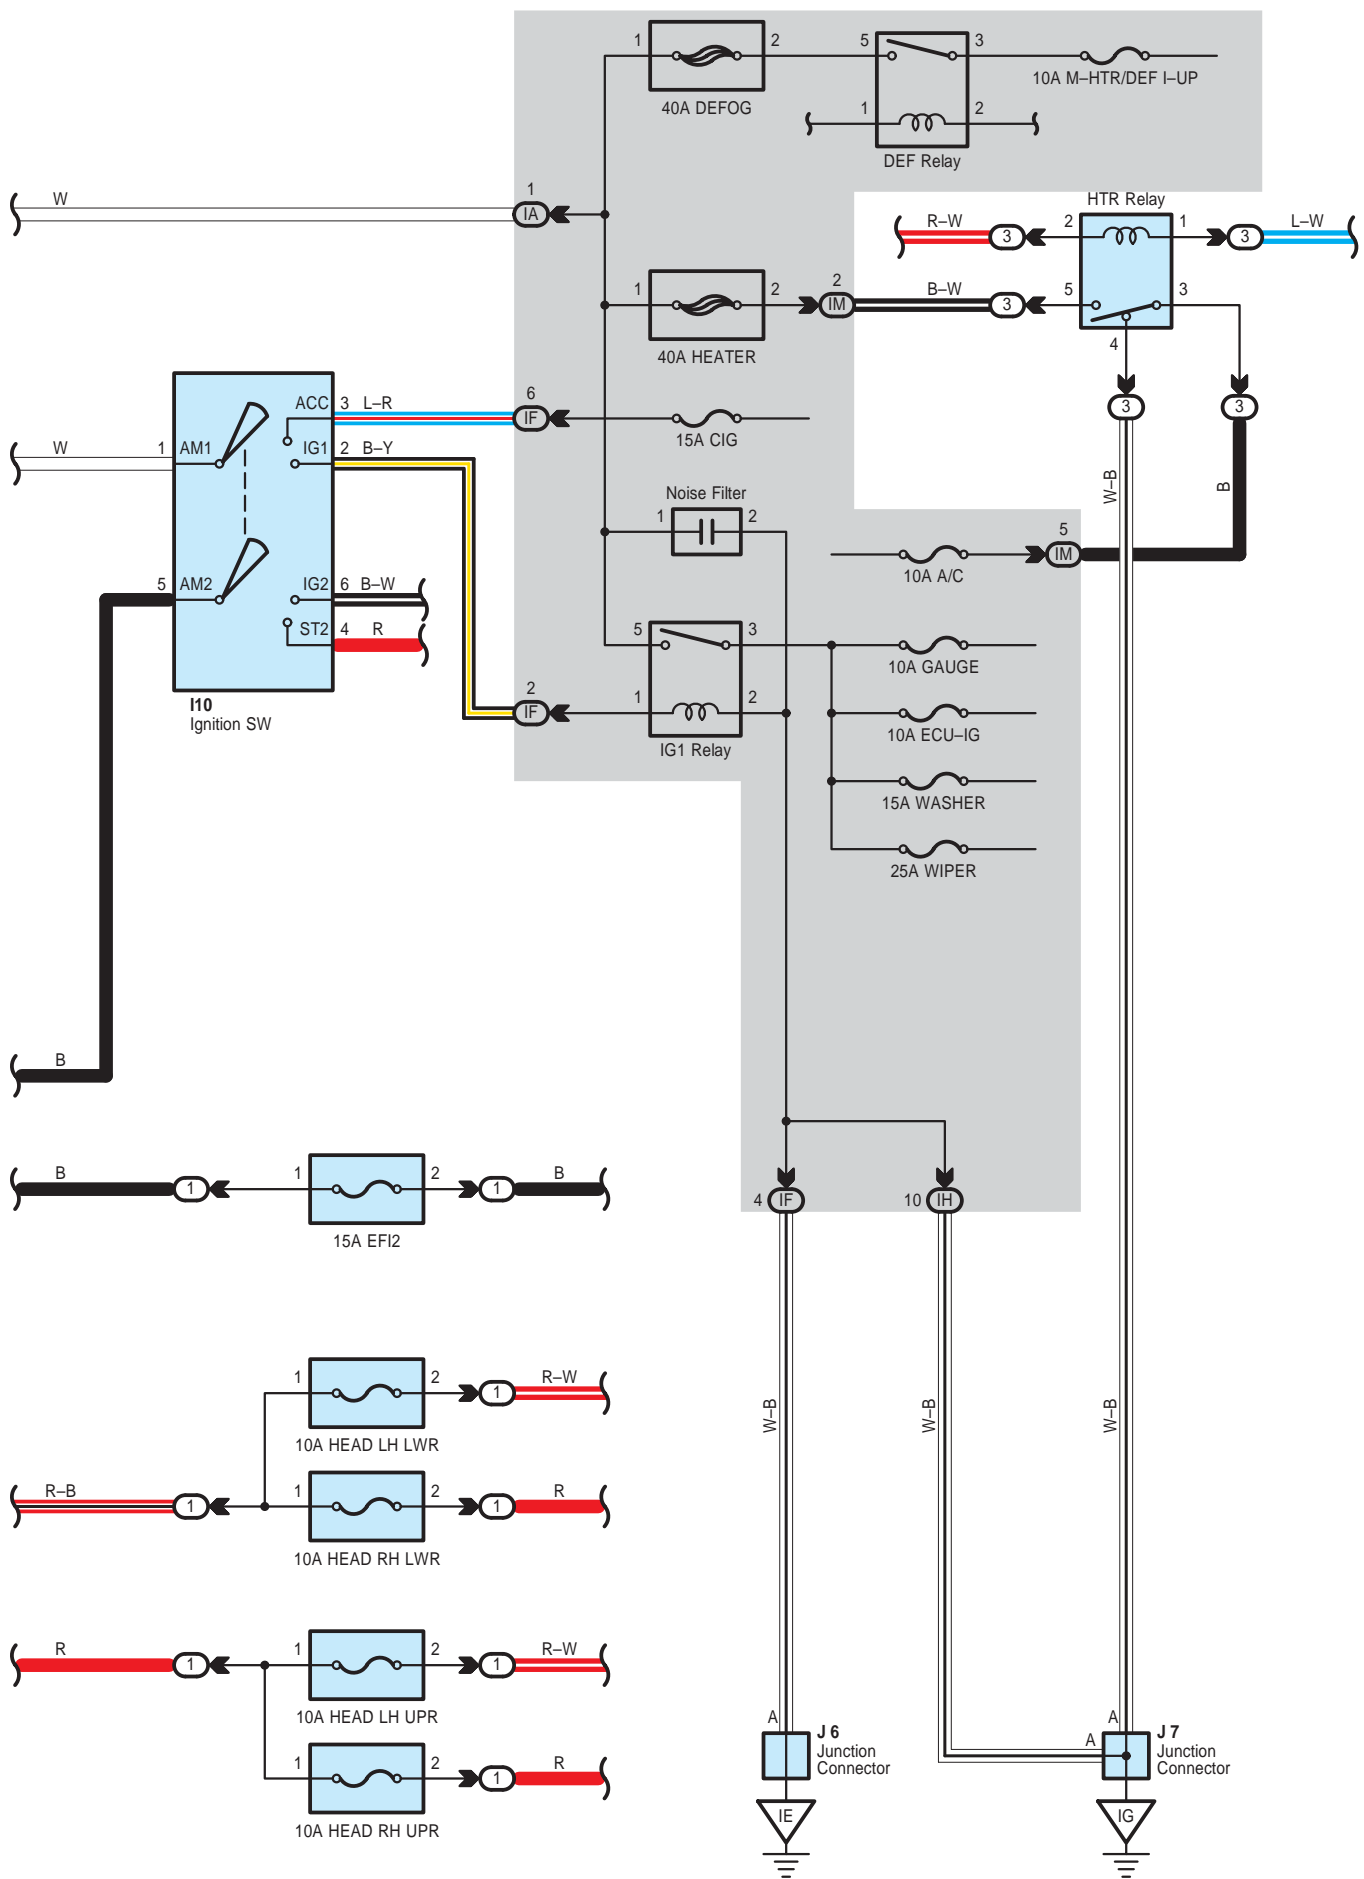

COROLLA (EM00H0U)

Power Source

: Parts Location

Code	See Page	Code	See Page	Code	See Page
G2	32 (1ZZ-FE)	I10	37	J7	37
	34 (2ZZ-GE)	J6	37		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IB		
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IM	24	
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)
1B		
1C	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1D		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)

: Ground Points

Code	See Page	Ground Points Location
IE	44	Behind the Combination Meter
IG	44	Right Kick Panel

