



☐ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C9		36		G2	B	32 (1ZZ-FE)		J4	A	37	
G1	A	32 (1ZZ-FE)				34 (2ZZ-GE)		J5	B	37	
		34 (2ZZ-GE)		I10		37					

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
IL		
IM		
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)
1B		
3B	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (1ZZ-FE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	43 (2ZZ-GE)	
IA4	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
II2	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)