



# Turn Signal and Hazard Warning Light

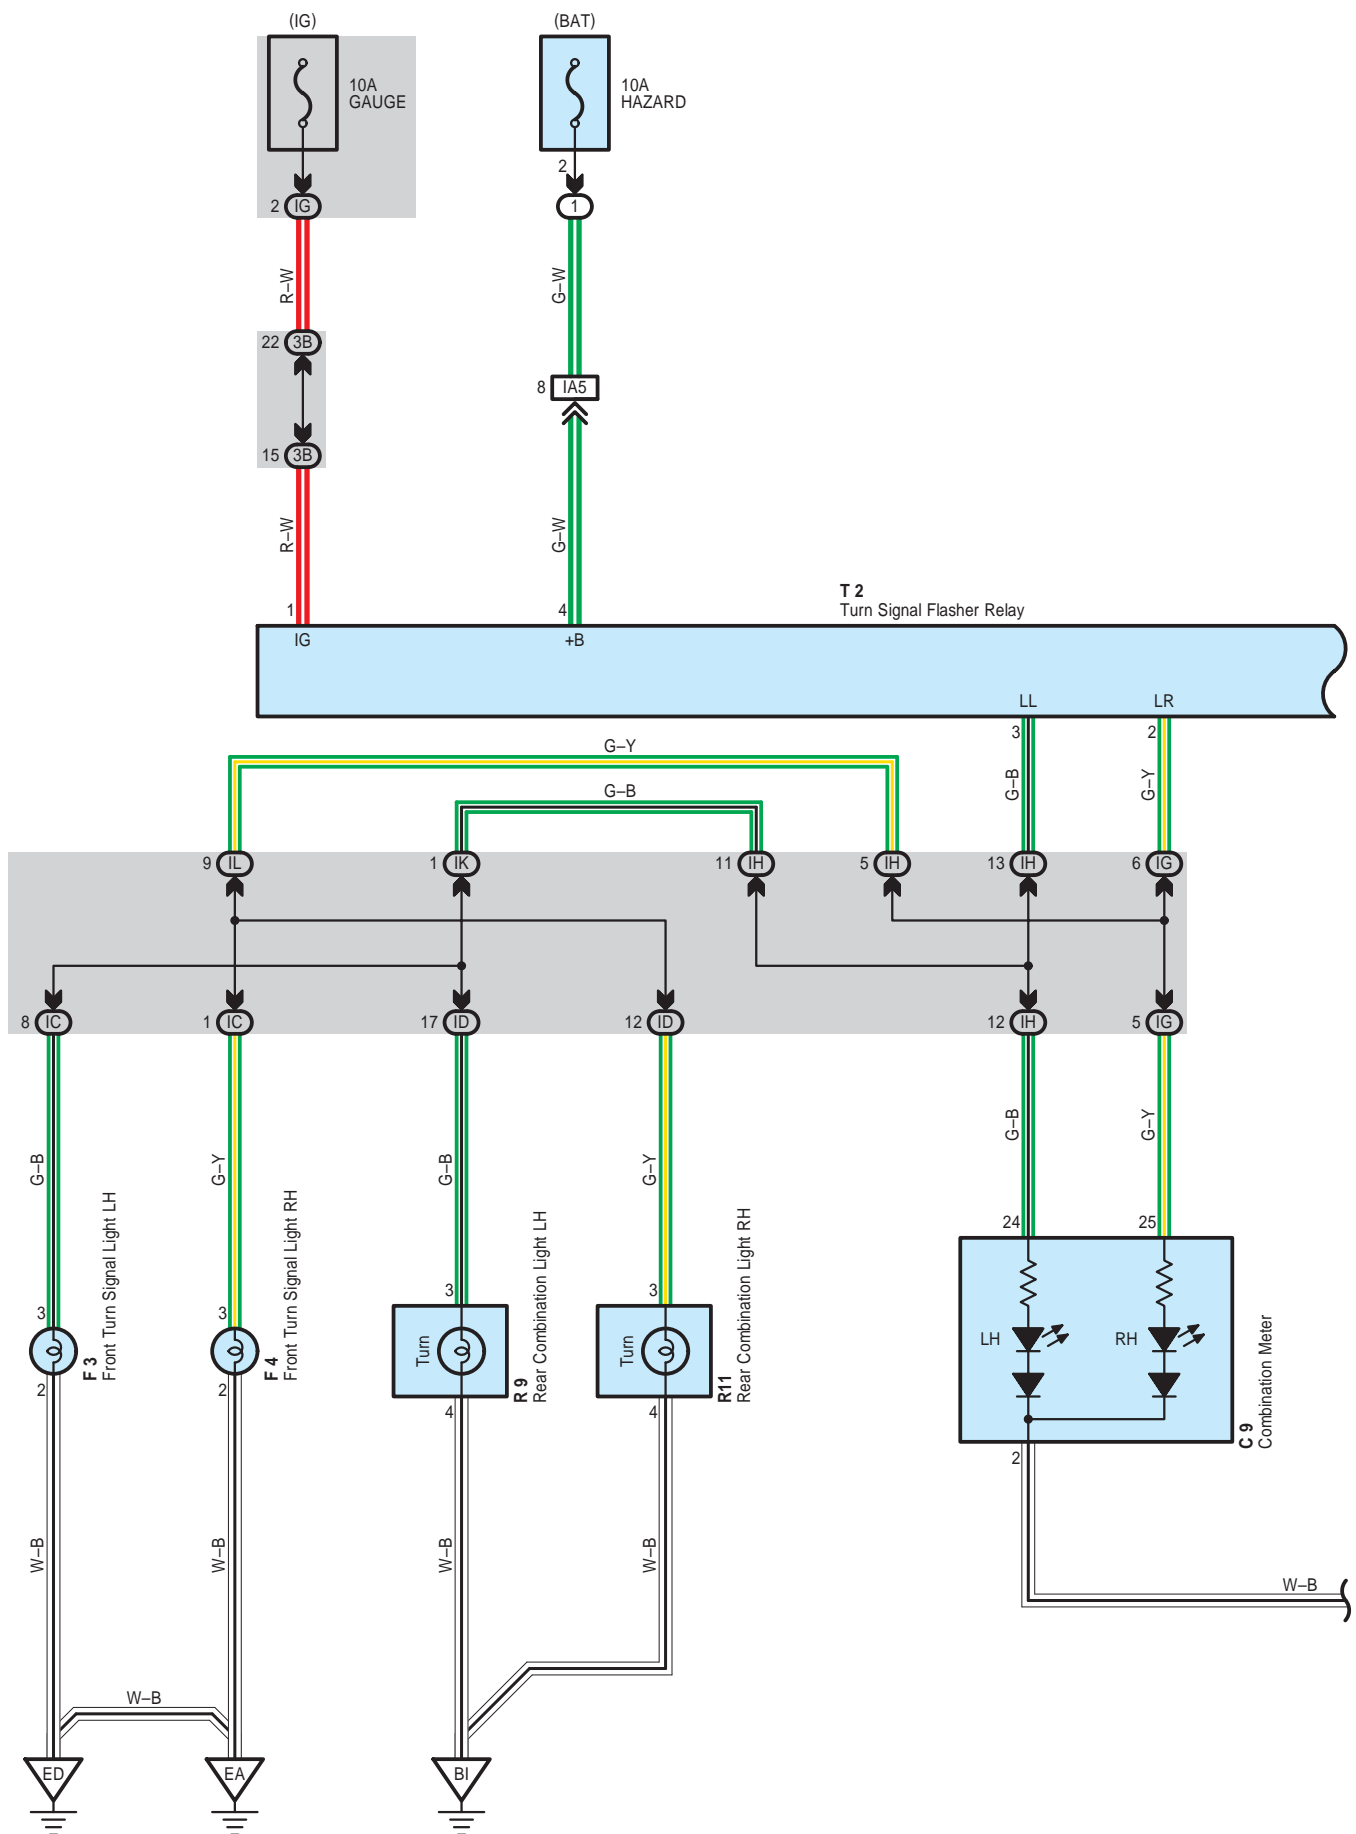

- \* 1 : w/ Wireless Door Lock
- \* 2 : w/o Wireless Door Lock

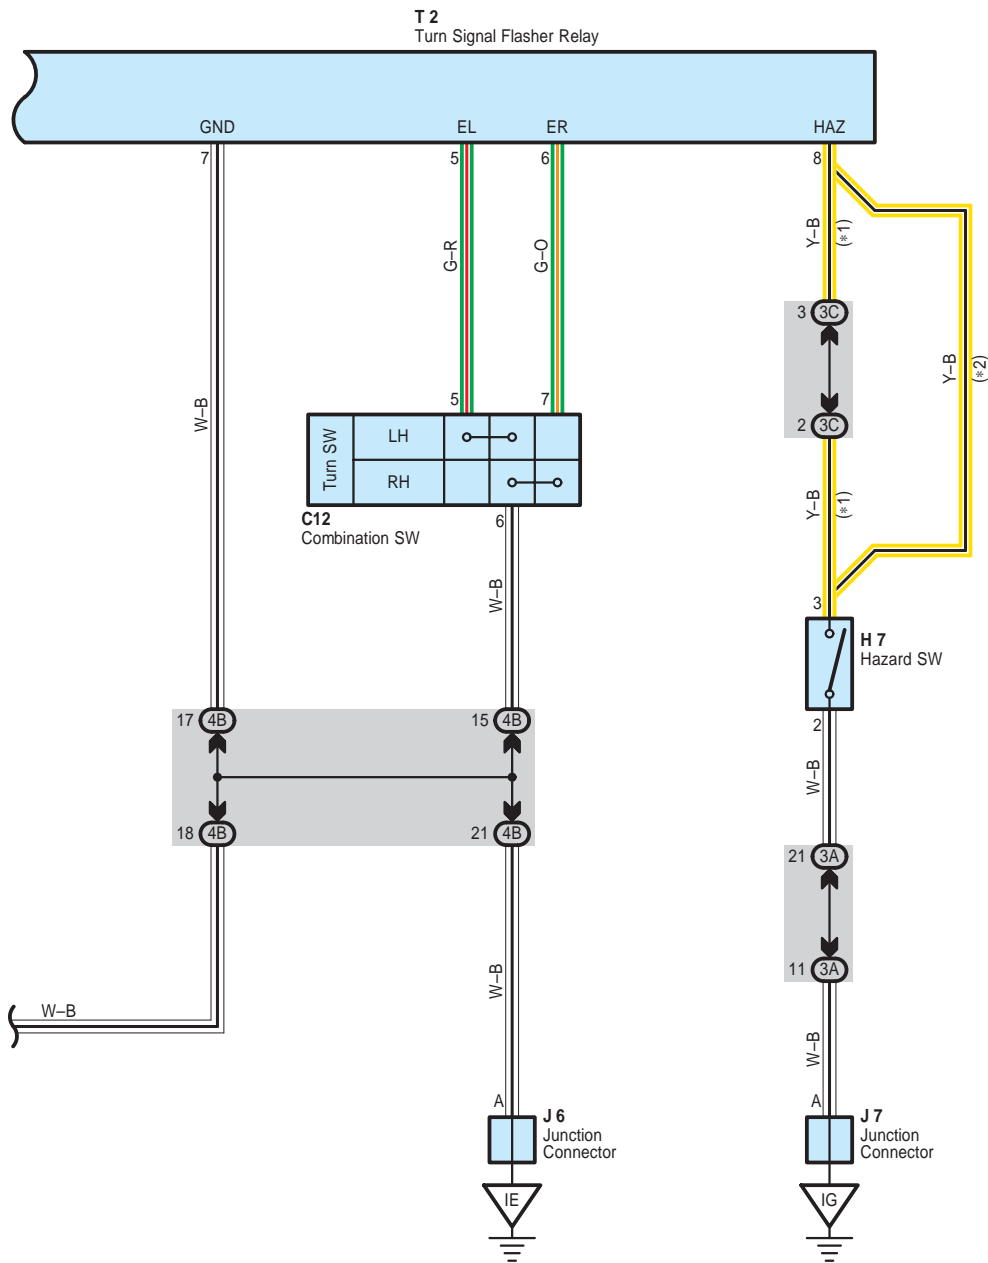

# Turn Signal and Hazard Warning Light

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
C9	36	F4	34 (2ZZ-GE)	R9	41 (*2)
C12	36	H7	37	R11	39 (*1)
F3	32 (1ZZ-FE)	J6	37		41 (*2)
	34 (2ZZ-GE)	J7	37	T2	37
F4	32 (1ZZ-FE)	R9	39 (*1)		

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IK		
IL		
3A	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
3C		
4B	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)

## : Ground Points

Code	See Page	Ground Points Location
EA	42 (1ZZ-FE)	Front Right Fender
	43 (2ZZ-GE)	
ED	42 (1ZZ-FE)	Front Left Suspension Tower
	43 (2ZZ-GE)	
IE	44	Behind the Combination Meter
IG	44	Right Kick Panel
BI	46 (*1)	Lower Back Panel
	47 (*2)	

\* 1 : w/ Side Airbag and/or Stereo Component Amplifier      \* 2 : w/o Side Airbag and Stereo Component Amplifier

