



Taillight

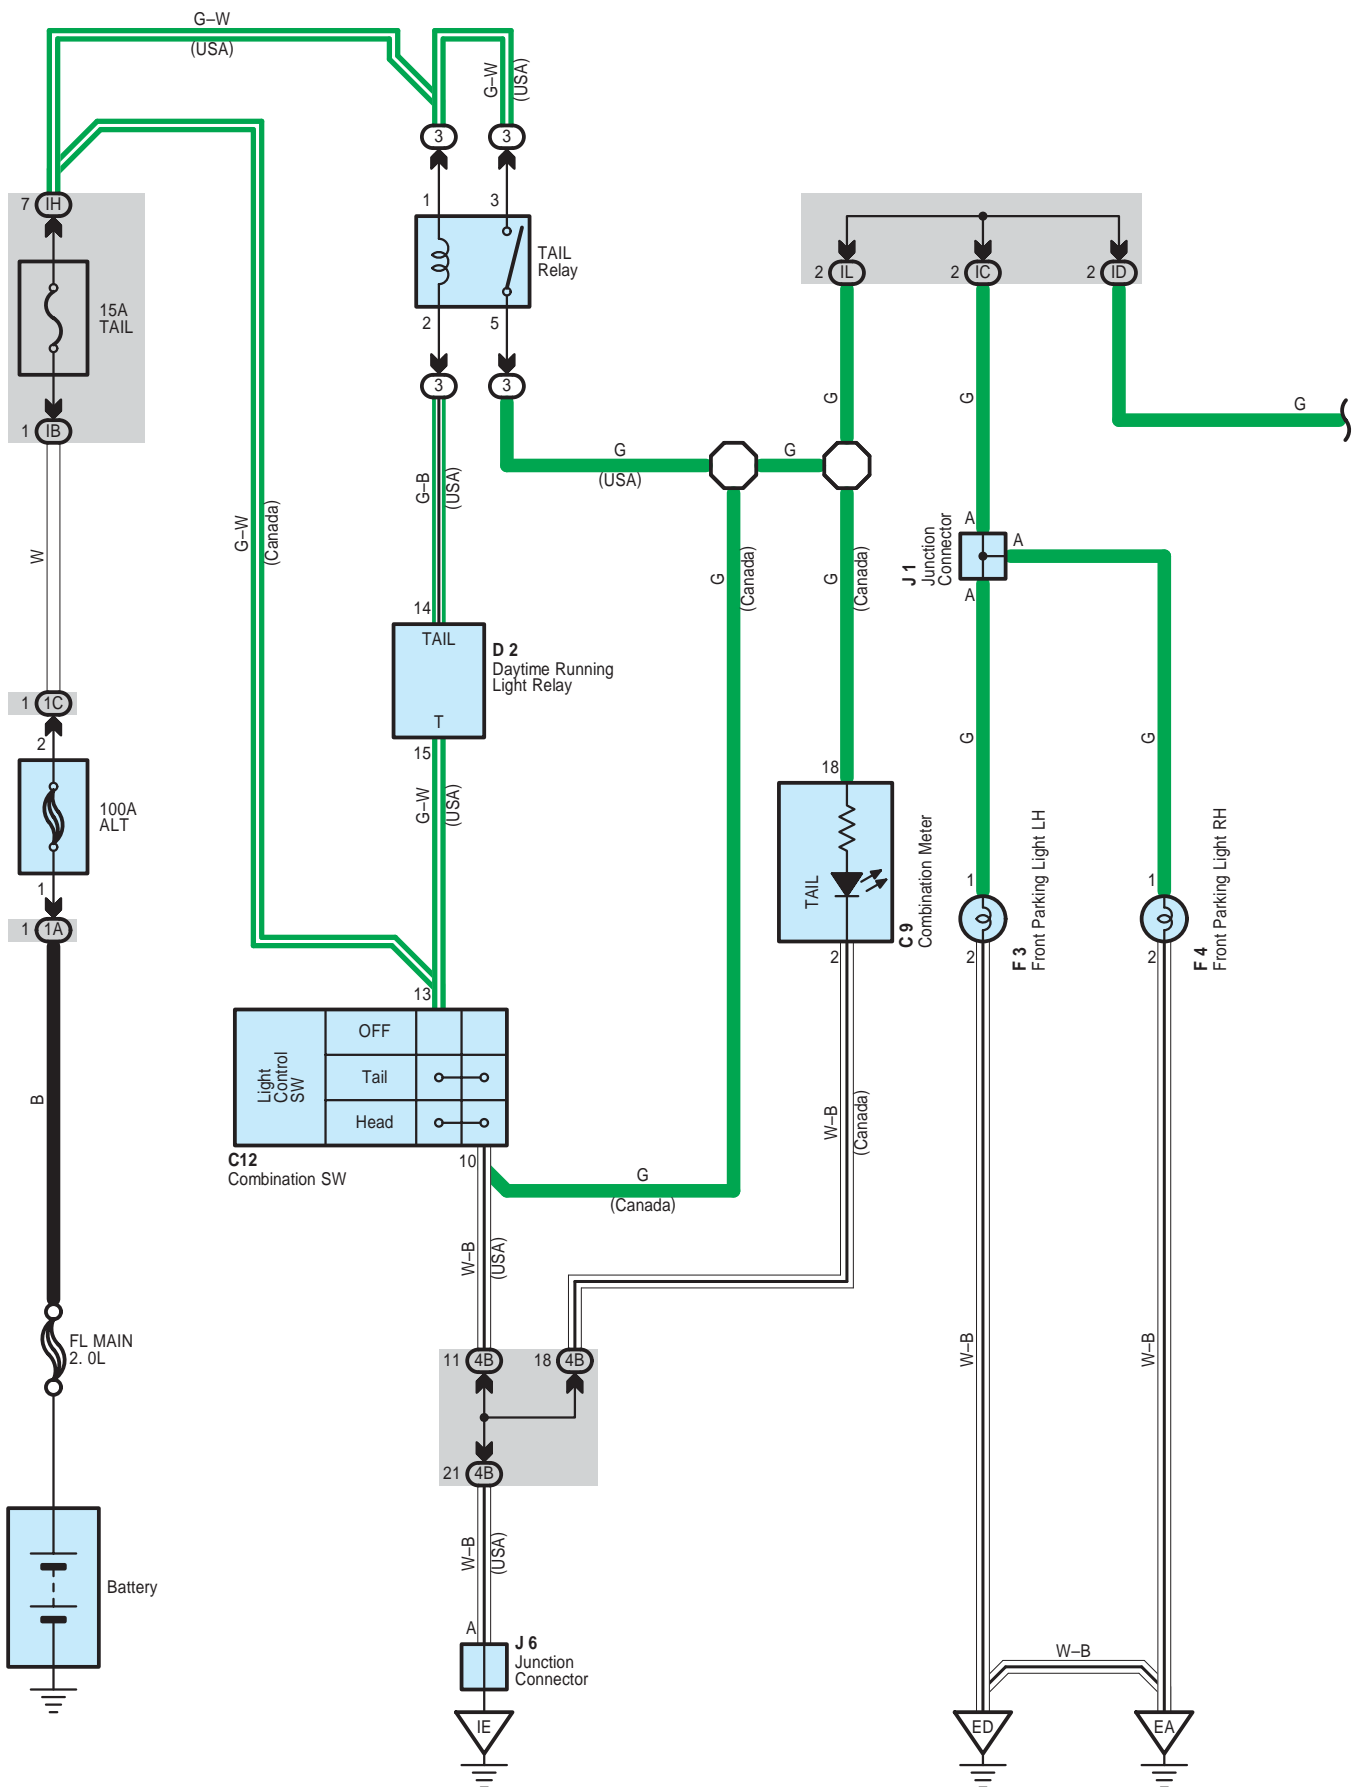

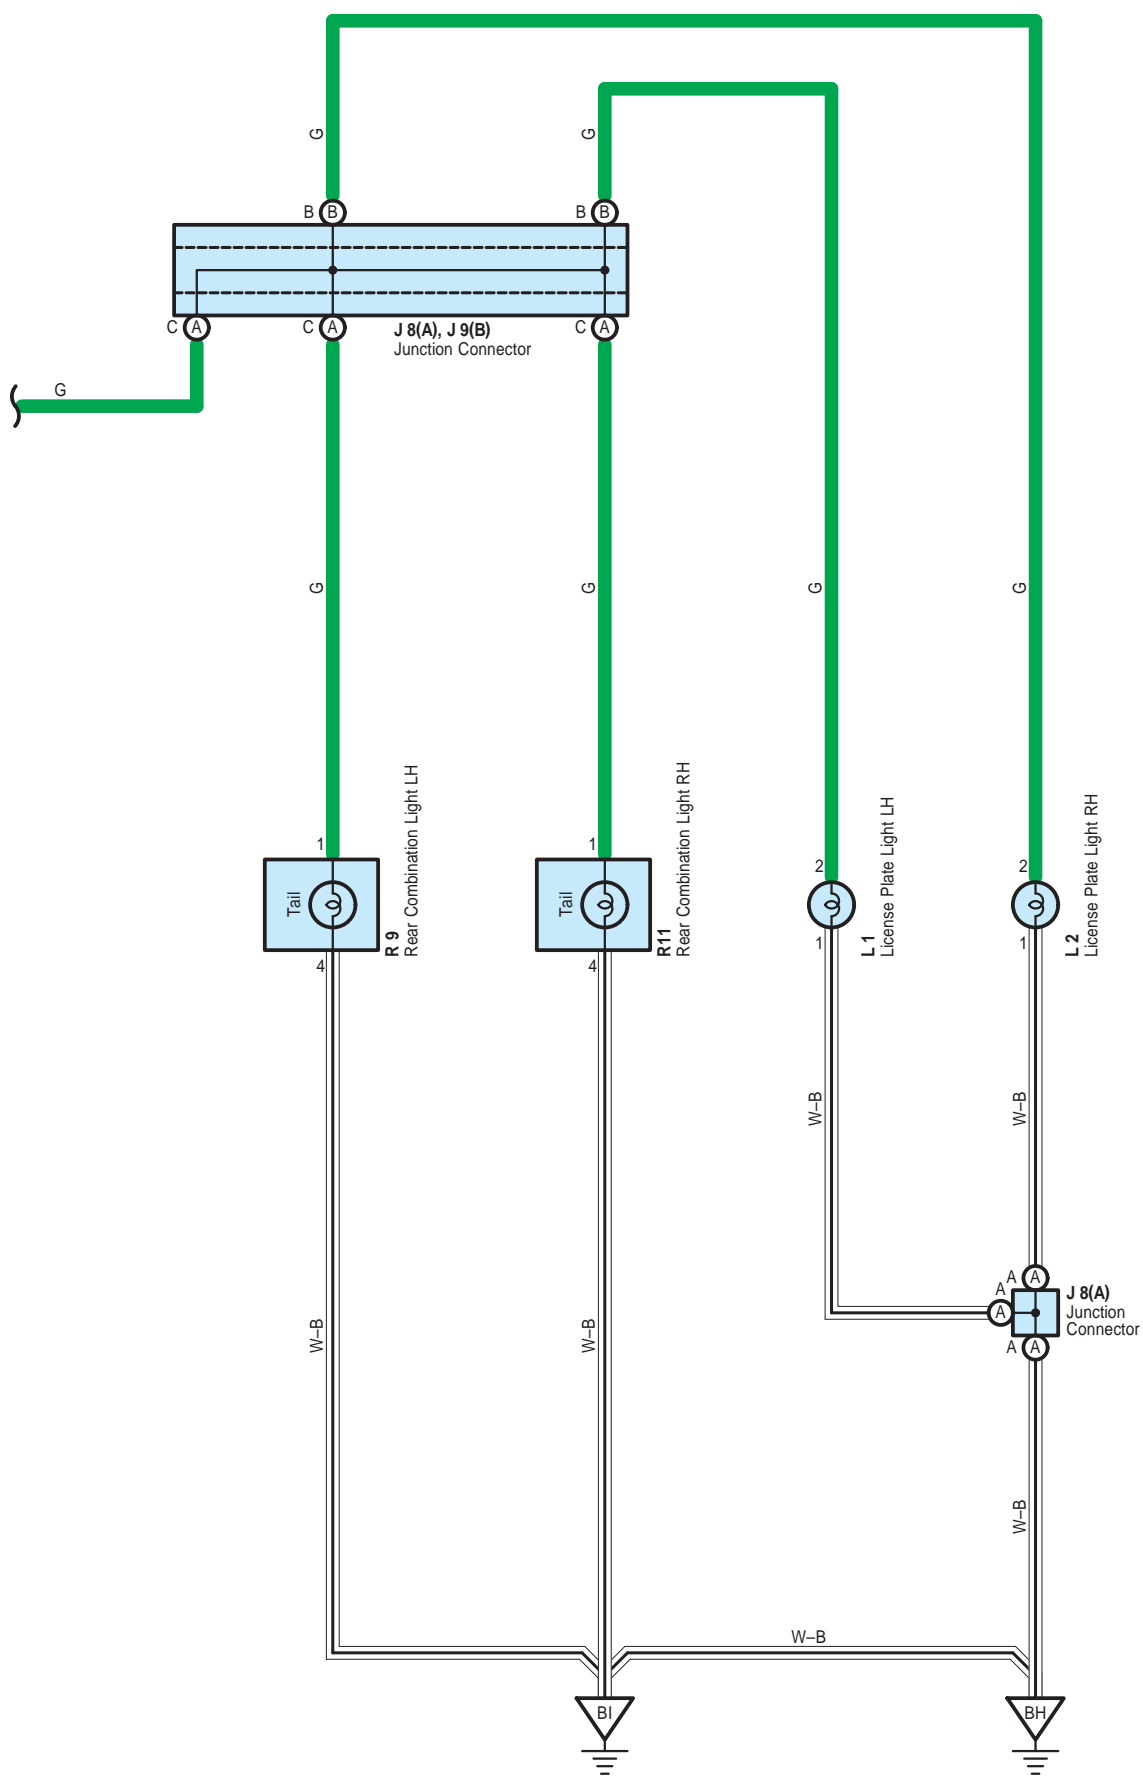

Taillight

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C9	36	J1	35 (2ZZ-GE)	L2	38 (*1)
C12	36	J6	37		40 (*2)
D2	36	J8	A	R9	39 (*1)
F3	32 (1ZZ-FE)				41 (*2)
	34 (2ZZ-GE)	J9	B	R11	39 (*1)
F4	32 (1ZZ-FE)				41 (*2)
	34 (2ZZ-GE)	L1			
J1	33 (1ZZ-FE)				

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IC		
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IH	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)
1C	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4B	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	42 (1ZZ-FE)	Front Right Fender
	43 (2ZZ-GE)	
ED	42 (1ZZ-FE)	Front Left Suspension Tower
	43 (2ZZ-GE)	
IE	44	Behind the Combination Meter
BH	46 (*1)	Under the Left Quarter Pillar
	47 (*2)	
BI	46 (*1)	Lower Back Panel
	47 (*2)	

* 1 : w/ Side Airbag and/or Stereo Component Amplifier * 2 : w/o Side Airbag and Stereo Component Amplifier

