


SEAT BELT WARNING LAMP FOR FRONT PASSENGER'S SEAT DOES NOT FLASH

WIRING DIAGRAM

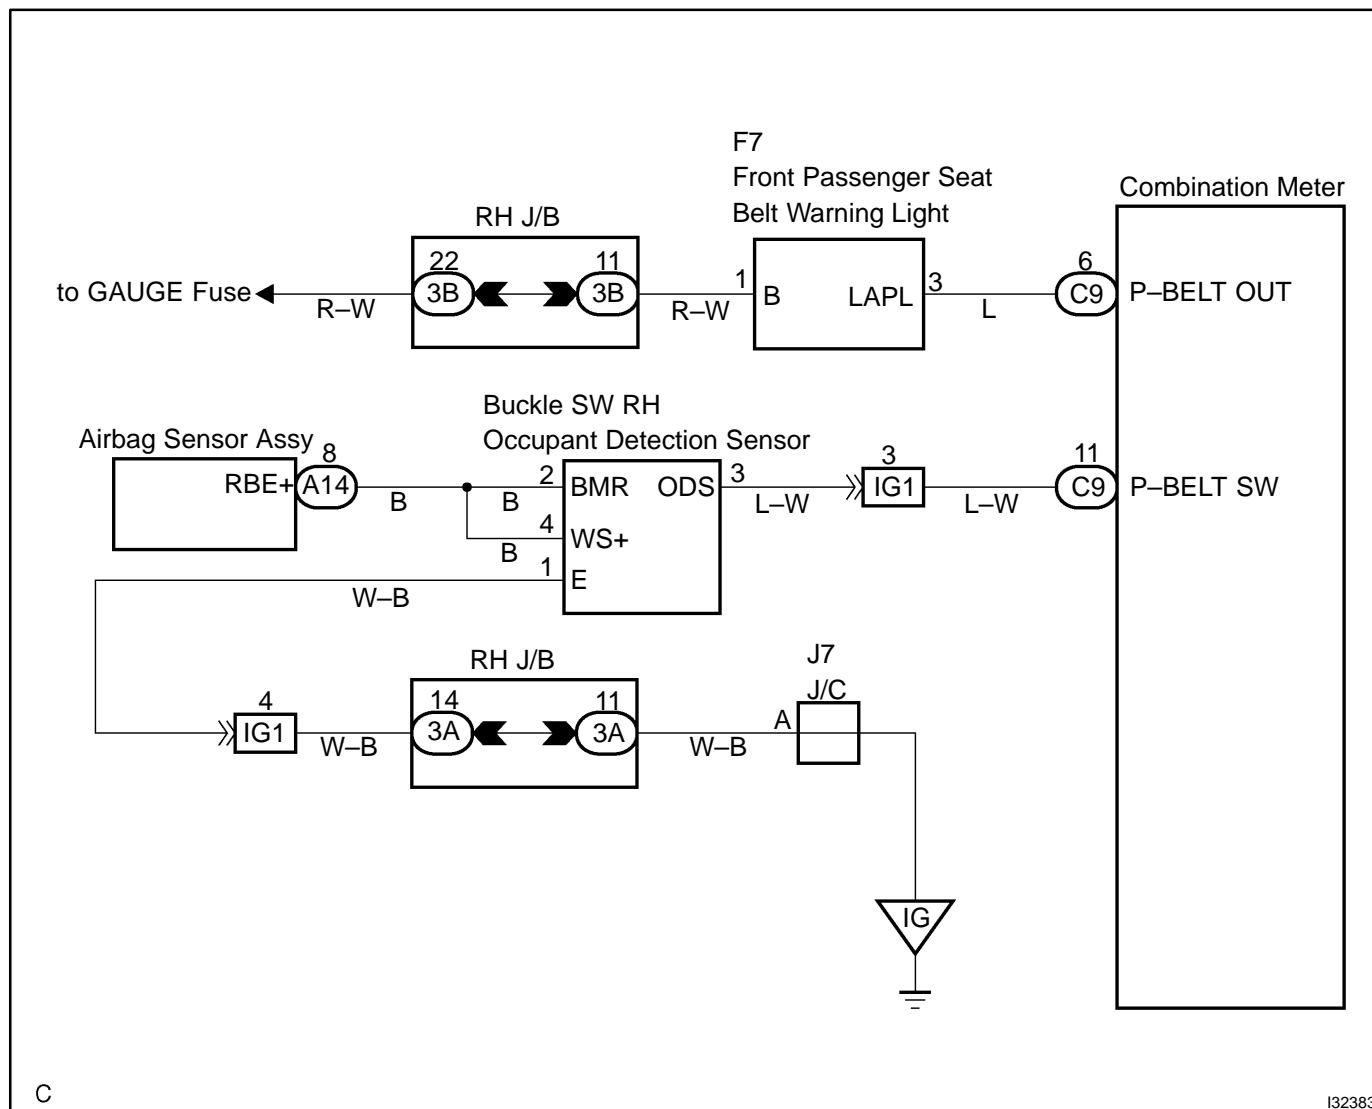


C

I32383

INSPECTION PROCEDURE

1 INSPECT COMBINATION METER ASSY

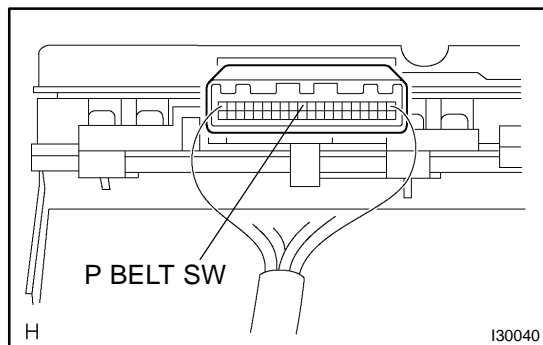


- (a) Ground terminal C9-11 on the combination meter side.
 (b) Check that the warning lightlights up.
OK: Warning light lights up.

OK

Go to step 3

NG

2 INSPECT PASSENGER SEAT BELT WARNING LAMP ASSY

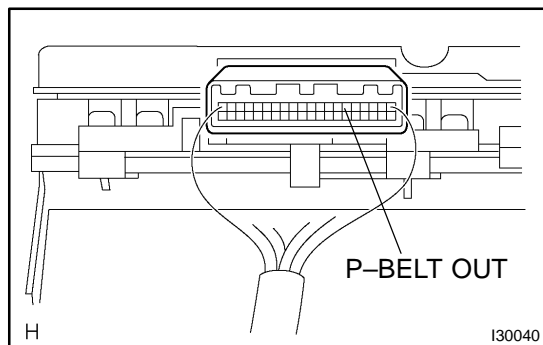

- (a) Ground terminal C9-6 on the combination meter side.
 (b) Check that the warning lightlights up.
OK: Warning light lights up.


NG

CHECK AND REPLACE PASSENGER SEAT BELT WARNING LAMP ASSY

OK

CHECK AND REPLACE COMBINATION METER ASSY

3 INSPECT FRONT SEAT INNER BELT ASSY RH

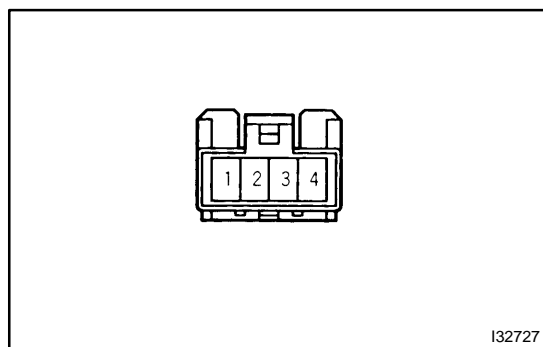

- (a) Check continuity.
 (1) Disconnect the front seat inner belt assy.
 (2) Check the continuity in between terminals 1 and 2 of front seat inner belt assy RH.

OK:


Condition	Continuity
Seat belt is fastened	Continuity
Seat belt is unfastened	No continuity

NG

CHECK AND REPLACE FRONT SEAT INNER BELT ASSY RH

OK

4 INSPECT SEPARATE SEAT TYPE FRONT SEAT CUSHION PAD

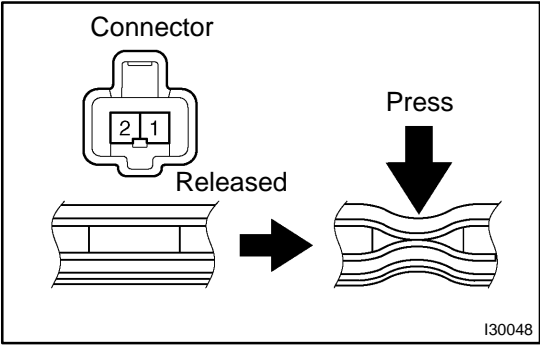

- (a) Disconnect the separate type front seat cushion pad.
- (b) Check continuity separate type front seat cushion pad.

Sear condition	Terminal	Specified condition
Released	1 – 2	No continuity
Pressed	1 – 2	Continuity

NG CHECK AND REPLACE SEPARATE SEAT TYPE FRONT SEAT CUSHION PAD

OK

REPAIR OR REPLACE HARNESS AND CONNECTOR