





# Wireless Door Lock Control

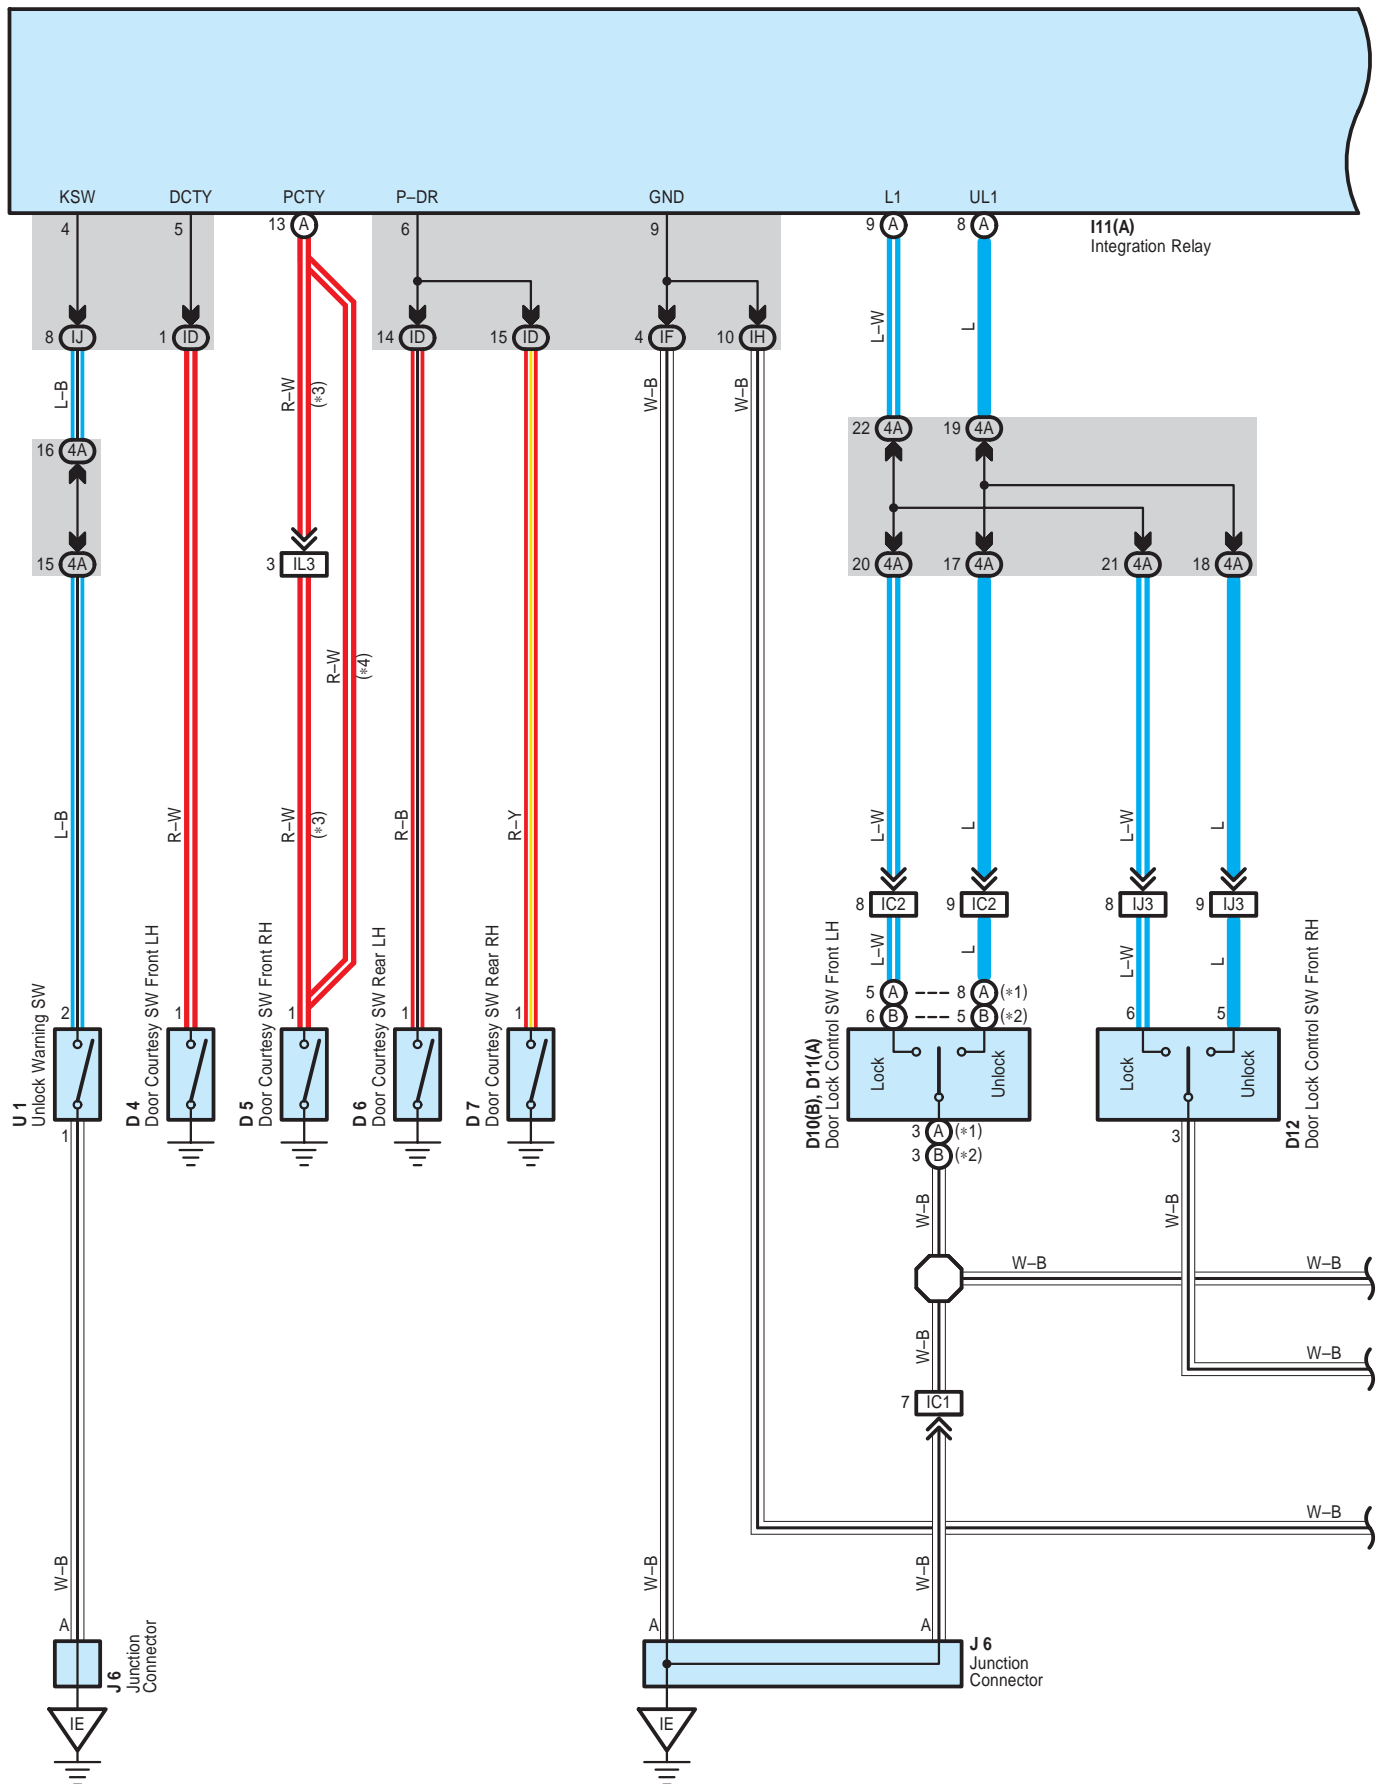

- \* 1 : w/ Power Window
- \* 2 : w/o Power Window
- \* 3 : w/ Stereo Component Amplifier
- \* 4 : w/o Stereo Component Amplifier

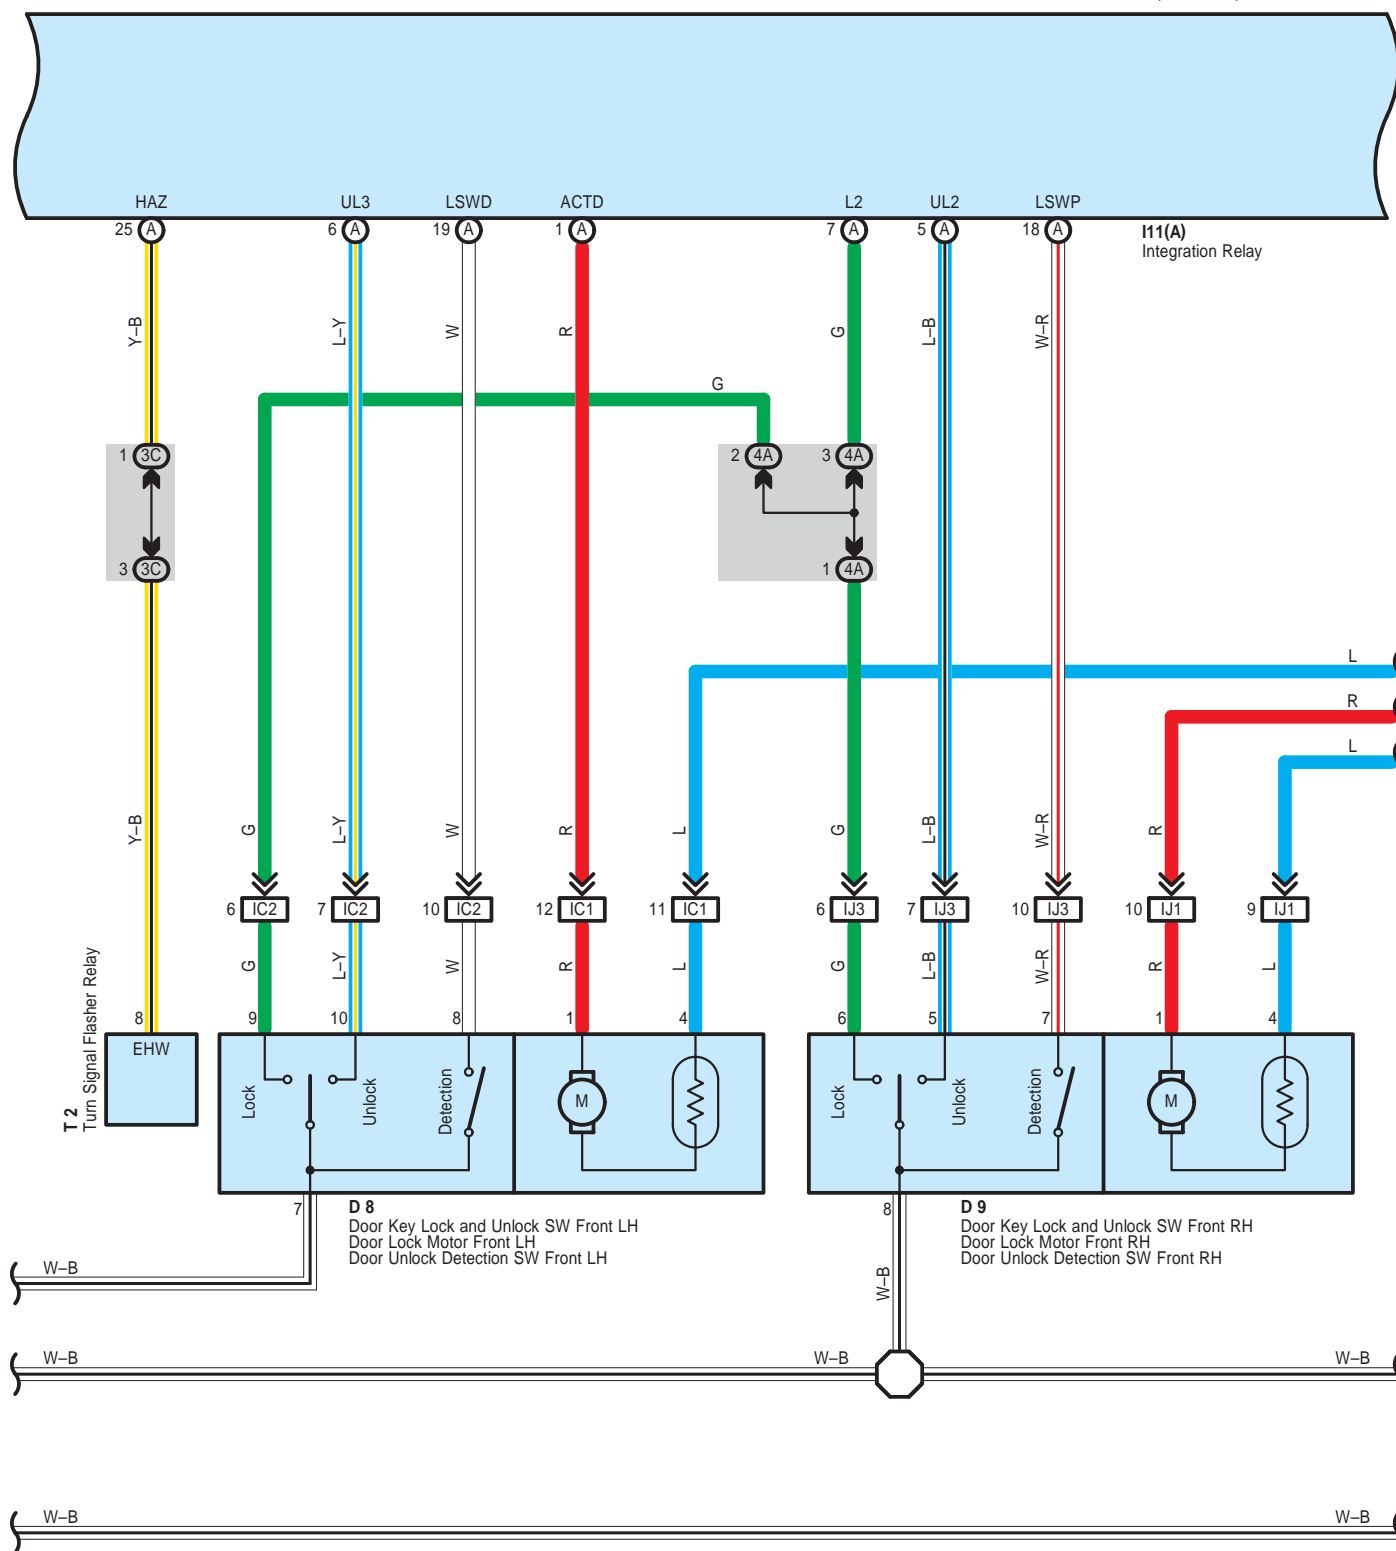

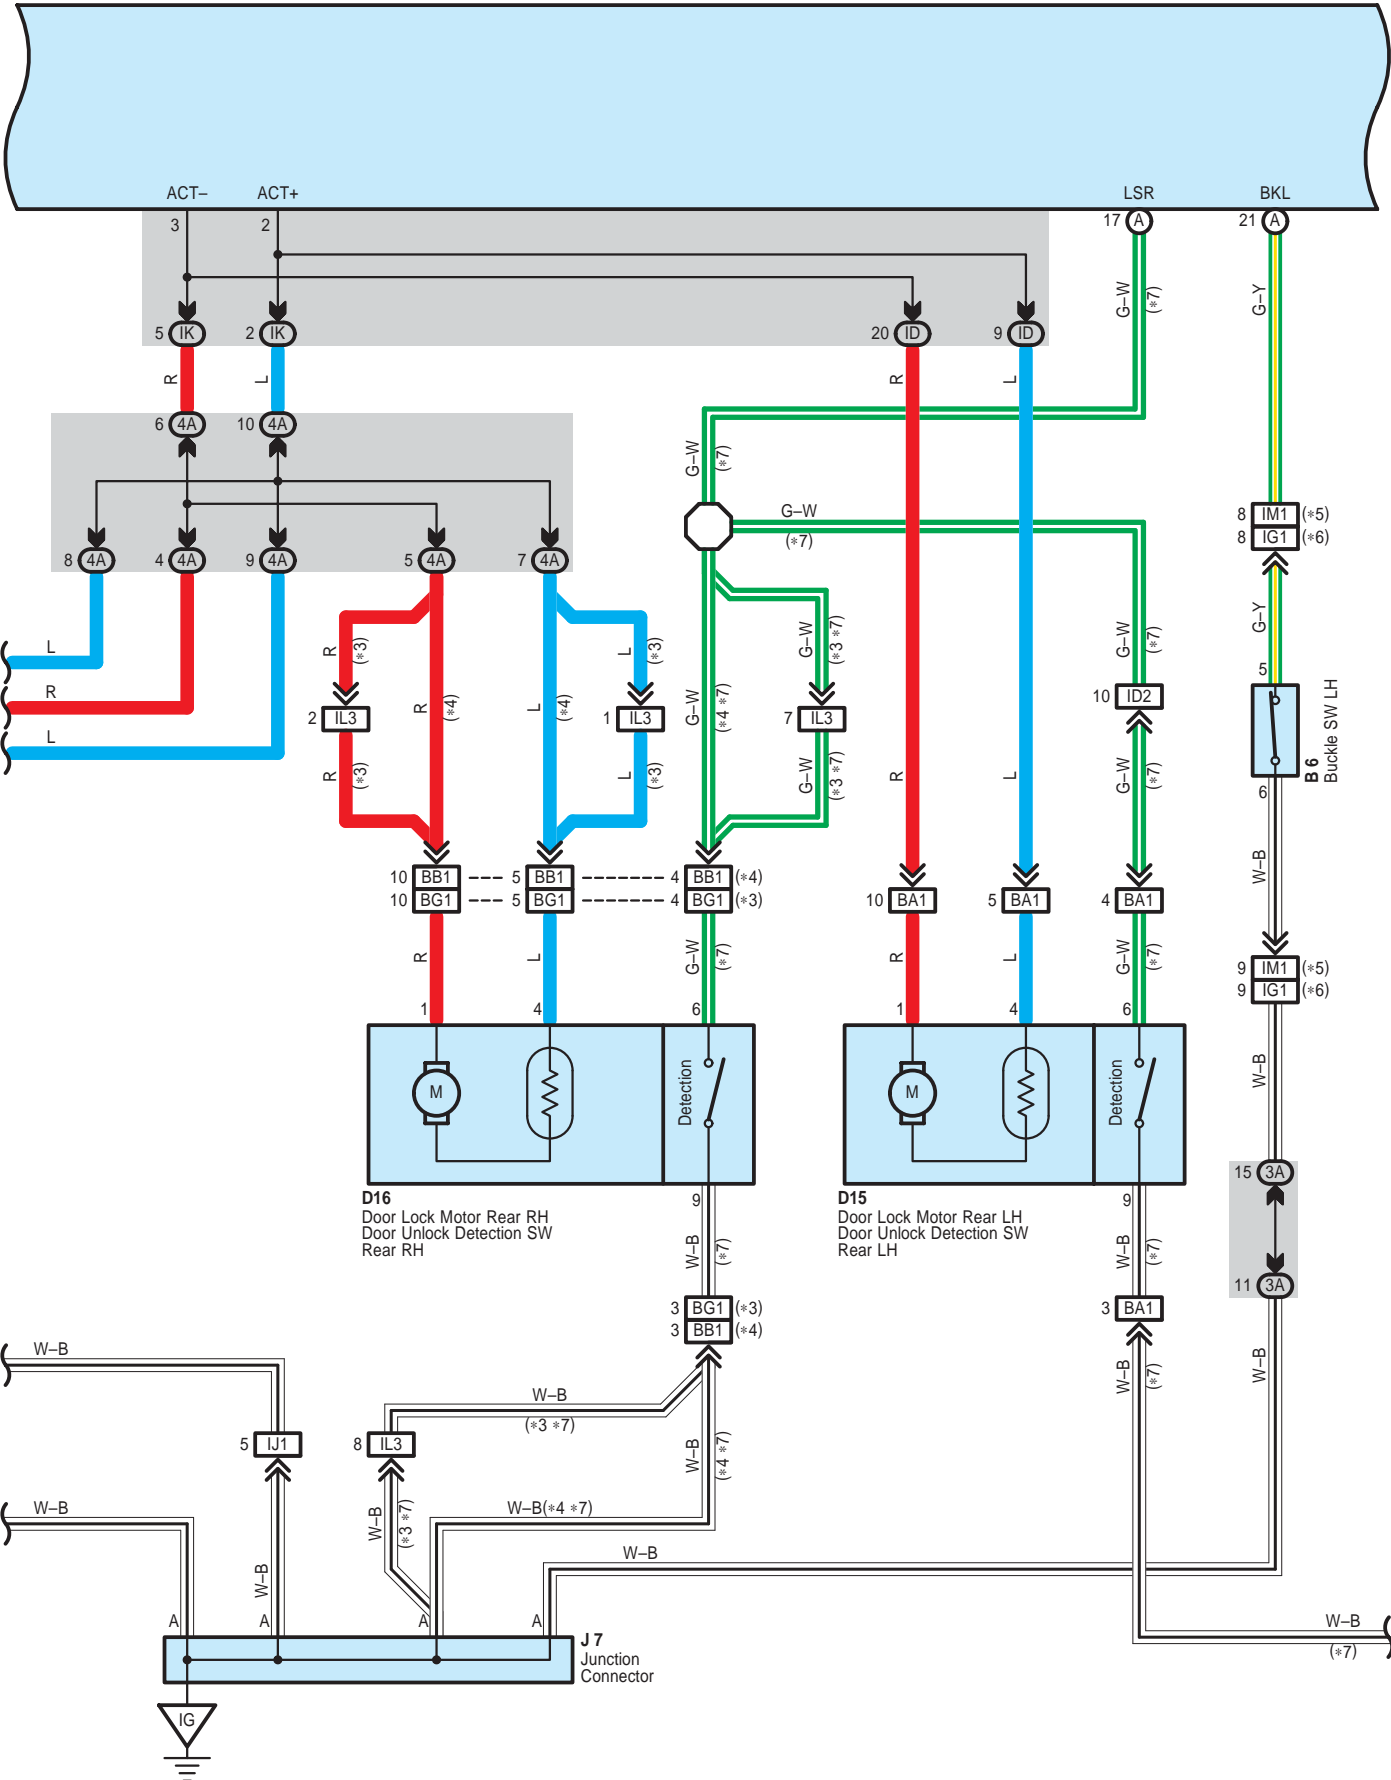

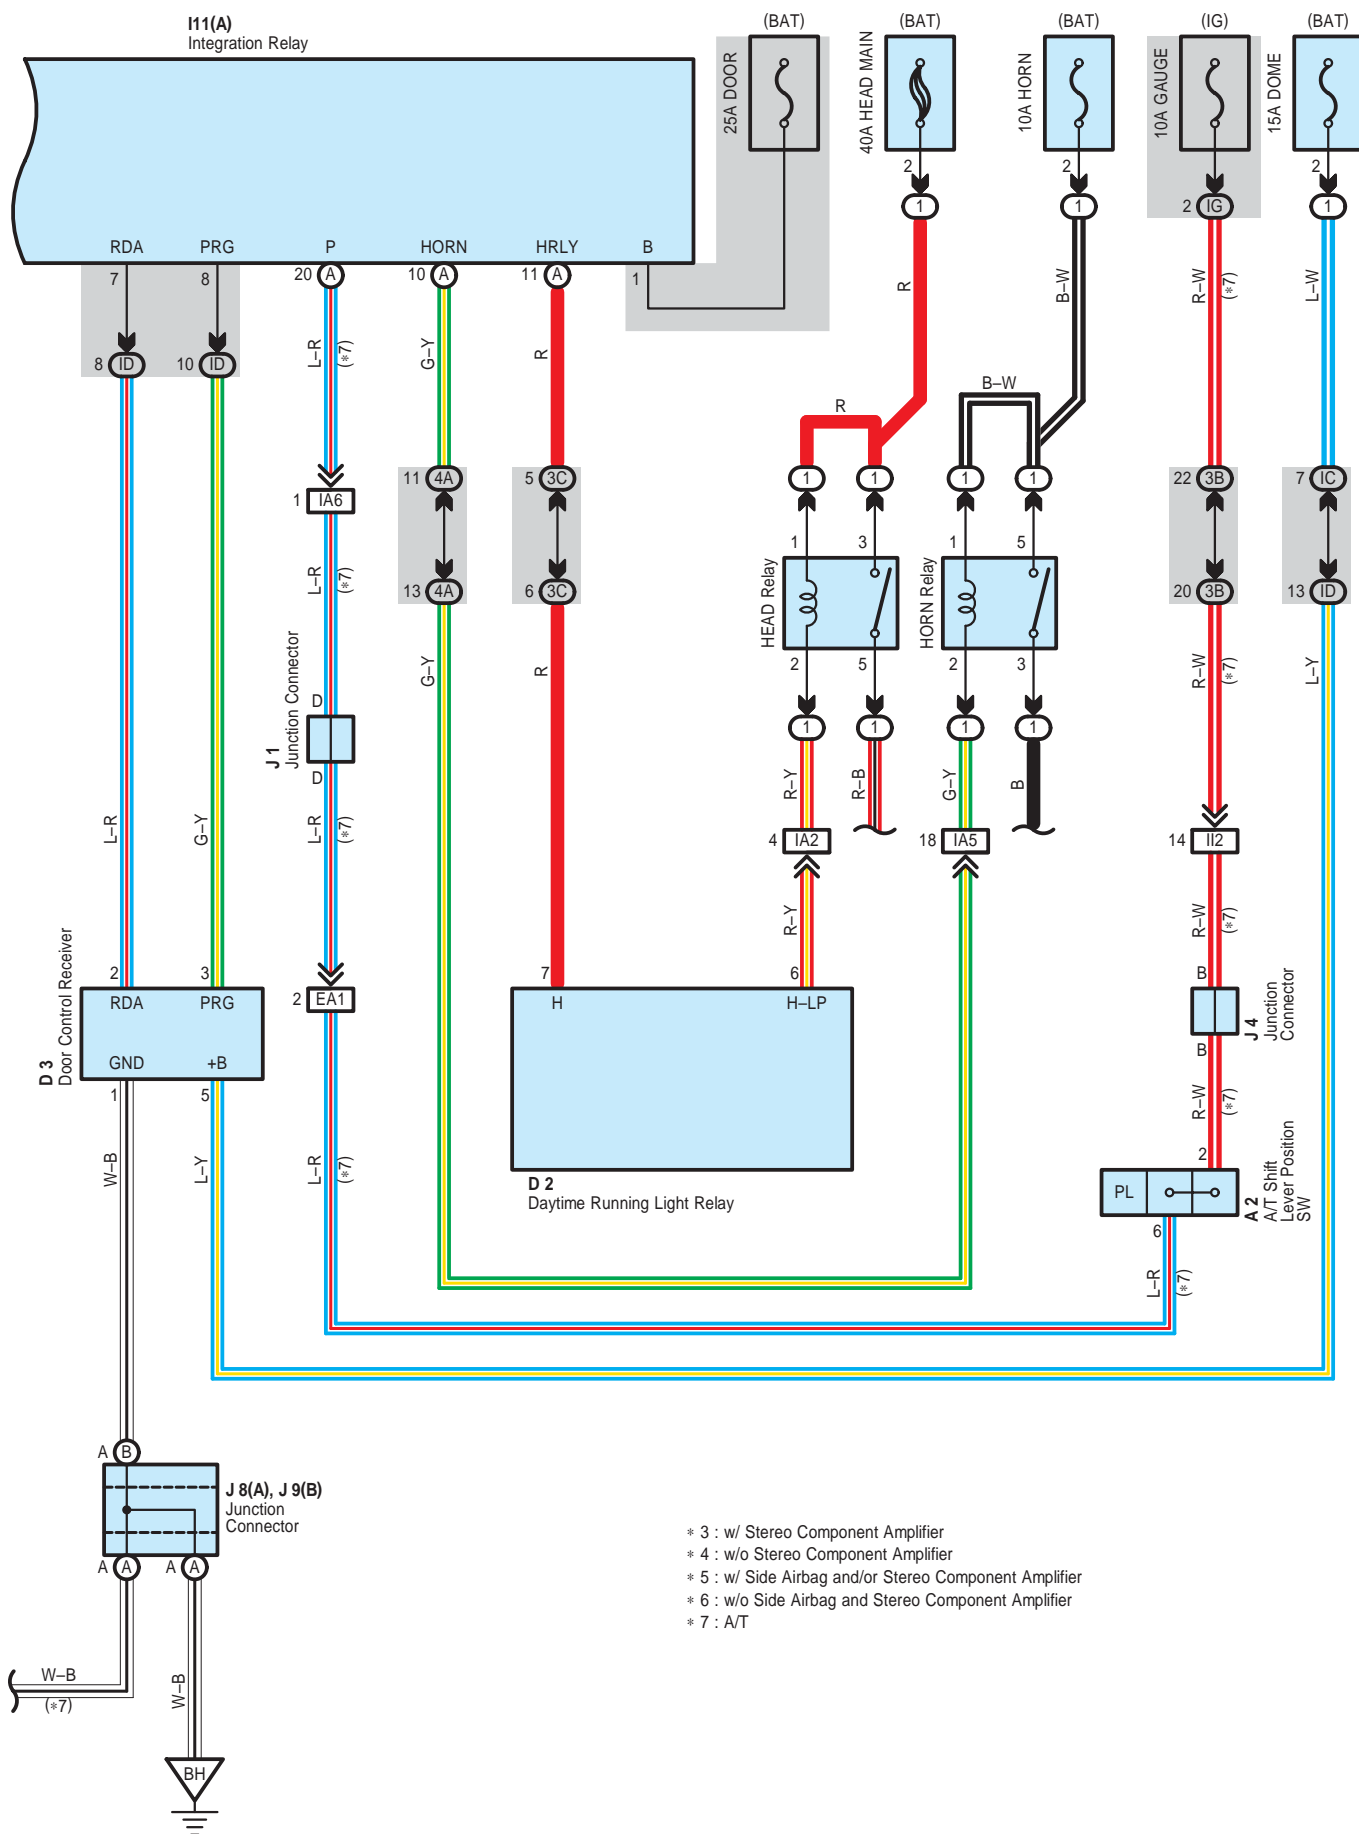

- \* 3 : w/ Stereo Component Amplifier
- \* 4 : w/o Stereo Component Amplifier
- \* 5 : w/ Side Airbag and/or Stereo Component Amplifier
- \* 6 : w/o Side Airbag and Stereo Component Amplifier
- \* 7 : A/T

# Wireless Door Lock Control

## System Outline

Door lock control (Lock and unlock) and panic control (TVIP alarm and flash) is performed by remote control, without the ignition key inserted in the door key cylinder, using low-power electrical waves emitted by a transmitter.

### 1. Wireless Door Lock or Unlock Normal Operation

With the ignition key not inserted into the ignition key cylinder (Unlock warning SW off) and all the doors completely closed, when the lock or unlock button (Transmitter) is pushed, the door control receiver receives the electrical waves from the transmitter, and sends a signal to the integration relay causing it to operate.

As a result, the integration relay judges whether the door is locked or unlocked based on the signal from the door lock motor and door unlock detection SW, and sends a signal to switch the condition from lock to unlock or vice versa, causing the door lock motor to operate.

### 2. Visual Confirmation of Lock or Unlock

If all doors indicate that they are locked after the lock command, parking lights and taillights will flash once. If any door indicates that it is open after the unlock command, parking lights and taillights will flash twice.

### 3. Wireless Door Unlock Operation

Pushing the unlock button (Transmitter) once, driver's door is unlocked. Furthermore, pushing the button again within 3 seconds, the other doors are unlocked.

### 4. Automatic Lock Operation

With the ignition key not inserted into the ignition key cylinder (Unlock warning SW off) and all the doors completely closed, after pushing the button (Transmitter) to unlock all the doors, if a door is not opened within 30 seconds, all the doors will be automatically relocked.

### 5. Wireless Control Stop Function

If a door is open (Door courtesy SW on), a signal is input from the door courtesy SW to the integration relay stopping wireless door lock or unlock.

If the ignition key is in the ignition key cylinder (Unlock warning SW on), the unlock warning SW inputs a signal to the integration relay stopping wireless door lock or unlock.

### 6. Repeat Function

In case an appropriate lock detection signal is not received after outputting a lock signal when pushing the lock button (Transmitter), 1 seconds later, the integration relay output the lock signal again.

### 7. Remote Panic Operation

Panic will function when doors are locked or unlocked, open or closed. When the panic button (Transmitter) is pushed once, theft alarm sounds and headlights and taillights flash. Then, the panic or the unlock button (Transmitter) is pushed once more, sounding and flashing will stop. Panic will not function when ignition key is in ignition key cylinder.

## ○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
A2	32 (1ZZ–FE)	D8		38 (*1)	I11	A	37
B6	38 (*1)			40 (*2)	J1		33 (1ZZ–FE)
	40 (*2)	D9		38 (*1)			35 (2ZZ–GE)
D2	36			40 (*2)	J4		37
D3	38 (*1)	D10	B	38 (*1)	J6		37
	40 (*2)				40 (*2)	J7	
D4	38 (*1)	D11	A	38 (*1)	J8	A	38 (*1)
	40 (*2)						40 (*2)
D5	38 (*1)	D12		38 (*1)	J9	B	38 (*1)
	40 (*2)			40 (*2)			
D6	38 (*1)	D15		38 (*1)	T2		37
	40 (*2)			40 (*2)	U1		37
D7	38 (*1)	D16		38 (*1)			
	40 (*2)			40 (*2)			

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

\* 1 : w/ Side Airbag and/or Stereo Component Amplifier

\* 2 : w/o Side Airbag and Stereo Component Amplifier

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
IJ		
IK	24	
3A	28	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
3C		
4A	30	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

**: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (1ZZ-FE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	43 (2ZZ-GE)	
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
IA5		
IA6		
IC1	44	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2		
ID2	44	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IG1	45	Instrument Panel Wire and Instrument Panel No.3 Wire (Front Side of the Parking Brake Lever)
II2	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IJ1	45	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ3		
IL3	45	Floor Wire and Instrument Panel Wire (Right Kick Panel)
IM1	45	Instrument Panel Wire and Floor Wire (Front Side of the Parking Brake Lever)
BA1	46 (*1)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
	47 (*2)	
BB1	46 (*1)	Rear Door RH Wire and Instrument Panel Wire (Right Center Pillar)
	47 (*2)	
BG1	46 (*1)	Rear Door RH Wire and Floor Wire (Right Center Pillar)

**: Ground Points**

Code	See Page	Ground Points Location
IE	44	Behind the Combination Meter
IG	44	Right Kick Panel
BH	46 (*1)	Under the Left Quarter Pillar
	47 (*2)	

\* 1 : w/ Side Airbag and/or Stereo Component Amplifier

\* 2 : w/o Side Airbag and Stereo Component Amplifier